

# Notes on these Operating Instructions

The operating instructions and installation guidelines have been organized so that subject-related information can be easily found using the contents list.

**Note**

You will find comprehensive Operating Instructions for navigation on relevant CDs/DVDs and at the online help of the device.

The section "Frequently Asked Questions" contains answers to questions that are frequently addressed to our customer service department.

## Document Your Navigation Unit

It is important to record the details of your Navigation Unit and the purchase thereof. In the event you require warranty support you may be asked for this information. The serial number can be found on the back of the device:

Serial Number	.....
Password	.....
Information note	.....
SuperPIN	.....
UUID	.....
Date of Purchase	.....
Place of Purchase	.....

Please record the serial number into any appropriate guarantee documents.  
You will enter your own password and information note using the Security Function.  
The SuperPIN and the UUID will be provided following the activation of the Security Function. See Page 17.



## **Quality**

The components used have been selected to provide a product that has a high level of functionality and is user friendly, safe and reliable. A well-balanced hardware and software design allows us to offer you a technologically advanced navigation system, which is both practical and enjoyable to use.

## **Service**

Our customer care is there to provide support and assistance whenever you have questions or are experiencing problems.

This manual contains a section specific to Customer Service starting on page 41.

Copyright © 2009, version 25/03/2009. All rights reserved. Microsoft®, MS-DOS®, and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium® is a registered trademark of Intel Corporation. The names of actual companies and products mentioned herein may be the trademarks of their respective owners. Information in this document is subject to change without notice.



# Contents

<b>Safety and Maintenance .....</b>	<b>1</b>
Safety Instructions .....	1
Data Security .....	1
Operating Environment.....	2
Repair .....	2
Ambient temperature .....	2
Electromagnetic Compatibility .....	3
Connection .....	4
Power supply through Car Adapter .....	4
Power Supply through AC adapter (optional) .....	4
Cabling .....	4
Information about the Regulatory Compliance according to R&TTE.....	5
Battery Operation .....	5
Cleaning and Maintenance.....	5
Care of the Display .....	6
Recycling and Disposal.....	6
Transport .....	7
Supplied Items .....	8
<b>Views .....</b>	<b>9</b>
Front Components .....	9
Back Components .....	10
Bottom Components.....	11
Top Components .....	11
Right Components .....	12
Left Components.....	13
Holder with extension socket (optional) .....	14
Front components .....	14
Back components.....	15
<b>Initial Set up .....</b>	<b>16</b>
I. Charging the Battery .....	16
II. Power Supply .....	17
Car Adapter.....	17
Alternative possibility of charging the battery.....	17
AC Adapter (optional) .....	18
III. Switching on the Device .....	19
IV. Installing the Navigation Software .....	20



<b>General Operating Instructions .....</b>	<b>21</b>
Switching on/off the device.....	21
<b>Security .....</b>	<b>23</b>
Storing the password and the information note .....	23
Making settings .....	24
SuperPIN and UUID .....	25
Fingerprint Sensor .....	26
Benefits of this technology .....	26
Storing a fingerprint .....	26
Making subsequent settings.....	28
Password Request .....	29
Resetting the Navigation System .....	30
Soft Reset .....	30
1. Possibility .....	30
2. Possibility .....	30
Switching the Device off Completely / Hard Reset .....	31
<b>Navigation .....</b>	<b>32</b>
Safety Instructions for Navigation .....	32
General Instructions .....	32
Notes for Use in a Vehicle .....	33
Aerial Orientation .....	33
I. Mounting the Car Holder .....	34
II. Attaching the Navigation System .....	35
Fixing the navigation system via cradle with extension socket .....	36
III. Connecting the Car Adapter .....	37
IV. Starting the Navigation Software .....	38
Warning function for traffic monitoring points .....	39
<b>Integrated FM Transmitter (optional) .....</b>	<b>41</b>
Starting the FM Transmitter.....	41
Overview of the main screen .....	41
Description of the Interfaces .....	42
Selecting the frequency.....	42
<b>Speech commands (optional) .....</b>	<b>44</b>
<b>Handsfree Facility by means of Bluetooth (optional) .....</b>	<b>49</b>
Starting the Bluetooth Application.....	49
Overview of the Main Screen .....	50
Pairing the Navigation Device and the Mobile Phone .....	51
Accepting incoming calls .....	52
Making Calls .....	52



During a Call.....	53
<b>MP3 Player (optional) .....</b>	<b>54</b>
Main Screen Overview.....	54
Select a Title and Move it into the List of Favourites.....	56
List of Favourites .....	57
List of the established bookmarks .....	57
<b>Picture Viewer (optional).....</b>	<b>58</b>
Operating the Picture Viewer.....	58
Main Screen .....	58
Full Image View.....	59
<b>Video Player (optional) .....</b>	<b>61</b>
Main Screen Overview.....	61
Selecting and playing video .....	61
<b>Travelguide (optional) .....</b>	<b>63</b>
<b>AlarmClock (Wake up function) (optional).....</b>	<b>64</b>
Overview of the main screen .....	64
Description of the Interfaces .....	65
Setting the System Time.....	66
Selecting an Alarm Signal.....	67
Setting the Volume .....	67
Snooze Function .....	68
Ending the Alarm Clock Application .....	68
<b>Contact Viewer (optional) .....</b>	<b>69</b>
Create the contacts database.....	69
Operating the Contact Viewers.....	70
Contacts list view .....	70
Visiting card view .....	71
Selection of addresses and phone numbers.....	72
<b>Sudoku (optional) .....</b>	<b>73</b>
Main Screen .....	73
Description of the switch fields.....	73
<b>FAQ .....</b>	<b>75</b>
<b>Customer Service .....</b>	<b>76</b>
Faults and Possible Causes .....	76
Additional Support.....	76



**Appendix .....77**

Special CleanUp Function..... 77

Synchronisation with the PC..... 80

    I. Installing Microsoft® ActiveSync® ..... 80

    II. Connecting with the PC ..... 81

        Alternative possibility of charging the battery..... 81

    III. Working with Microsoft® ActiveSync® ..... 82

GPS (Global Positioning System) ..... 83

    Dead Reckoning (gyroscope) (only in the case of Model X5535)..... 83

TMC (Traffic Message Channel)..... 84

Pay TMC (optional) ..... 84

    Connecting an additional TMC Dipole Aerial (optional) ..... 85

The Remote Control (optional)..... 86

Safety Instructions ..... 86

Batteries and Proper Treatment ..... 86

Button Layout ..... 87

Installation ..... 88

Working with Memory Cards..... 90

    Inserting Memory Cards..... 90

    Removing Memory Cards..... 90

    Accessing Memory Cards ..... 90

    Data Exchange via Card Reader ..... 91

Additional Card Material..... 91

    Transfer of card material to a memory card ..... 91

    Alternate method of installing Navigation Software (using a Memory Card) ..... 92

    Transferring Installation Files and Map Material to the Internal Memory ..... 92

**Specifications .....93**

**Model Overview .....94**

**Conditions of Warranty for the United Kingdom .....95**

**Index .....101**



# Safety and Maintenance

## Safety Instructions

Please read this section carefully and follow all the instructions provided. This will help ensure reliable operation and prolong the life for your appliance.

Keep the packaging and the user instructions for future reference or inquiries at a later date. If you pass the article on to another person, you should pass on these instructions.

- Never allow children to play with electrical equipment unsupervised.
- Keep the packing materials, such as plastic bags away from children as there is a danger of suffocation.
- Never open up the housing of the appliance or the power adapter. These contain no user-serviceable parts. If the housing is opened there is a danger of electric shock.
- Do not place any objects on the appliance and do not exert any pressure on the display. Otherwise there is a danger that the screen will break.
- To avoid damage, do not touch the screen with sharp objects. We recommend using only the stylus provided or finger when using the touch-screen functionality of the product.
- There is a risk of injury if the display breaks. If this should occur, use protective gloves to pack the broken parts and contact customer support to arrange for disposal. Then wash your hands with soap, since there is a possibility that chemicals may have escaped.

Remove the power adapter from the outlet, switch the appliance off immediately, or do not switch it on, and contact Customer Service.

- If the housing of the appliance or the power pack becomes damaged or liquid may have leaked into it the components must be checked by Customer Service in order to avoid damage!

## Data Security

- Every time your data is updated or modified backup copies should be made on an external storage medium. The supplier assumes NO liability for data loss or damage to data storage units, and no claims can be accepted for damages resulting from the loss of data or for consequential damages.



## Operating Environment

Failure to follow these instructions may lead to your appliance being damaged. In cases where products are damaged as a result of misuse or neglect the associated guarantee will be considered void.

- Keep your navigation System and all connected devices away from moisture and avoid exposure to dust, heat and direct sunlight, especially in the car.
- Make sure you prevent your appliance from getting wet, e.g. from rain and hail, at all times. Please note that moisture can even build up inside a protective pouch as a result of condensation.
- Avoid heavy vibrations and shaking.
- Please note the device should be installed vertically, this will ensure that the device remains secured within its holder.

## Repair

- Please contact our Service Center if you encounter technical problems with your appliance.
- In the event repair becomes necessary, please use only our authorized Service Partners. You will find the address on the back of your guarantee card.

## Ambient temperature

- The appliance will operate effectively at an ambient temperature of between +32°F and +95°F (0° C and 35° C) and at a relative humidity of between 10% and 90% (non-condensing).
- In the powered down state the appliance can be stored at between -4°F and +140°F (-20°C and +60°C).
- Store the appliance in a safe location, away from high temperatures (e.g. when parking or from direct sunlight).



# Electromagnetic Compatibility

- When connecting additional or other components the “Electromagnetic Compatibility Directive” (EMC) must be adhered to. Please note that only screened cable (maximum 10ft) should be used with this appliance.
- For optimal performance, maintain a distance of at least 10 ft. from sources of high-frequency and magnetic interference (televisions, loudspeaker systems, mobile telephones etc. This will help to avoid malfunctions and loss of data.
- Electronic devices emit electromagnetic waves during operation. These emissions are harmless, but can interfere with other devices operated in close proximity.

While our devices are tested and optimized for electromagnetic compliance in our laboratories, interference during operation may still occur in the device itself and with other devices in its proximity.

Should such interference occur, try to eliminate it by adjusting the positions of and the distances between the devices.

Before driving, please ensure that the electronic systems of the car are working properly.



## Connection

When connecting your appliance it is important to observe the following instructions:

### Power supply through Car Adapter

- The car adapter should only be connected to the lighter socket of a car (car battery = DC 12V $\equiv$ , truck battery = DC 24V $\equiv$ ). If you are in any doubt about the power source in your car, please contact your car manufacturer.

### Power Supply through AC adapter (optional)

- The outlet must be in the vicinity of the appliance and must be easily accessible.
- To disconnect your appliance from the power source, remove the mains adapter from the power socket.
- Only use the mains adapter on sockets at AC 100–240 V~ AC, 50/60 Hz. If you are unsure about the power supply to the place of use, ask the relevant energy supplier.
- Use only the power adapter provided with your appliance.
- Do not cover the power supply unit, in order to avoid damage through unacceptable warming.
- Stop using the power supply unit if the housing or the feed line to the device is damaged. Replace it with a power supply unit of the same type.
- For additional safety, we recommend the use of a surge protector in order to protect your appliance from damage from spikes or lightning strikes on the power network.

## Cabling

- Arrange cables so that they do not cause unnecessary obstruction or risk entanglement or snaring. E.g. ensure that the cables cannot be trod on, or tripped over.
- Do not place any items on the cable.



# Information about the Regulatory Compliance according to R&TTE

The following radio equipment has been supplied with this device (optional):


- Bluetooth (only in the case of model P5435 and X5535)
- FM-Transmitter (optional)

The company declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Complete declarations of conformity are available under [www.medion.com/conformity](http://www.medion.com/conformity).

**C €0984 !**

## Battery Operation

Your appliance is powered by an integrated battery, Li-Ion. In order to prolong the life and efficiency of your battery and ensure safe operation, follow the instructions below:

- Batteries cannot withstand excessive heat. Take care to avoid overheating of appliance and the integrated battery. Failure to comply with this instruction may lead to damage to or, even explosion of the battery.
- Only use the car adapter to charge the battery from the navigation kit.
-  The batteries are special category waste. When disposing of the appliance ensure that this is done correctly. Contact Customer Service for more details.

## Cleaning and Maintenance

### **Warning**

There are no user-serviceable or parts which require cleaning inside the housing of the appliance.

You can prolong the life of the appliance by taking the following simple steps:

- Always remove the power plug and all connecting cables before cleaning.
- Clean the appliance only with a damp, lint-free cloth.
- Do not use solvents, caustic or gaseous cleaners.




## Care of the Display

- Avoid scratching the display surface as this may be easily damaged. We recommended using a display protection film (mylar) to prevent scratching to the screen. Please contact your nearest dealer for this accessory.  
The foil on the display at delivery is purely for protection during transportation!
- Ensure that no traces of water remain on the screen. Water can cause irreversible discoloration.
- Use only a soft, lint-free cloth to clean the screen.
- Do not expose the screen to strong sunlight or ultraviolet radiation.

## Recycling and Disposal

The device and its packaging are recyclable.



Device 

At the end of its life, the appliance must not be disposed of in household rubbish. Consult your local waste disposal company to enquire about environmentally-friendly options for disposal.



Packaging

To avoid damage during transport, the appliance is supplied in protective packaging. The majority of packaging is manufactured from materials which can be disposed of in an environmentally friendly manner and be recycled professionally.



# Transport

When transporting the appliance please follow the instructions below:

- In the event of large fluctuations in temperature or humidity, condensation or moisture may form inside the appliance. This can cause an electrical short-circuit.
- After transporting the appliance wait until the unit has acclimatised and adjusted to surrounding conditions (e.g. room temperature and humidity) prior to use.
- In order to protect the appliance from dirt, knocks and scratching, please use an appropriate protective case.
- Before travelling ensure that you are aware of the power and communications provisions at your destination. Before travelling obtain any power or communications adapters that may be required for the operation of your device.
- When shipping your appliance we recommend using the original packaging. If the original packaging isn't available please contact customer service for advice.
- When passing through baggage control at airports, it is recommended that you pass the appliance and all magnetic storage media (external hard drives) through the X-ray system (the machine on which your bags are placed). Avoid the magnetic detector (the structure through which you yourself pass) or the magnetic wand (the hand device that the security staff use), since this may corrupt your data.



## Supplied Items

Please check the condition of items supplied and check for missing items using the list below. If you find your package to be incomplete, please forward us all claims for missing items within 14 days from the date of purchase.

The package should include the following:

- Navigation system
- Power cable for cigarette lighter
- USB cable
- TMC dipole antenna
- Car holder
- CDs/DVDs with navigation software, digital maps, ActiveSync®, data for rapidly re-setting the contents of the memory card/internal memory
- Instruction manual and warranty card

### Optional

- AC adapter
- Memory card SD
- Earphones
- Holder with extension socket
- Protective case



# Views


## Front Components



Ref	Component	Description
❶	Touch Screen	Displays the output of your appliance. Tap on the screen with the stylus (found in the holder, see page 35) to select menu commands or enter data.
❷	Battery charge indicator	The LED will flash <b>orange</b> during the charging process. It will shine constant <b>green</b> when the accumulator is fully charged.
❸	Bluetooth indicator	This LED will blink at different speeds, according to the connection status, if Bluetooth has been activated (only in the case of model P5435 and X5535).
❹	Microphone	only in the case of model P5435 and X5535




# Back Components

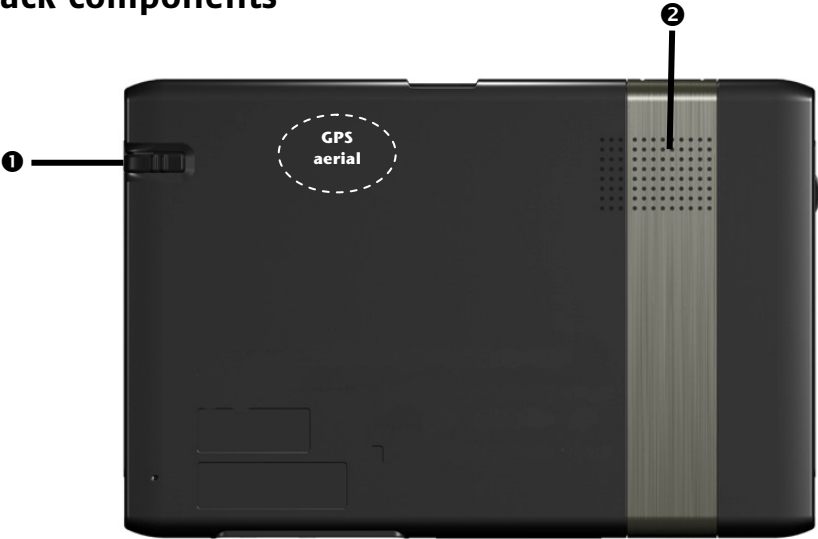


Ref	Component	Description
❶	Stylus	Take the stylus out of it's compartment in order to use it, and replace it after use. The stylus is required for operating the touch screen.
❷	Loudspeaker	Provides audible language statements and warn-ings.




# Bottom Components

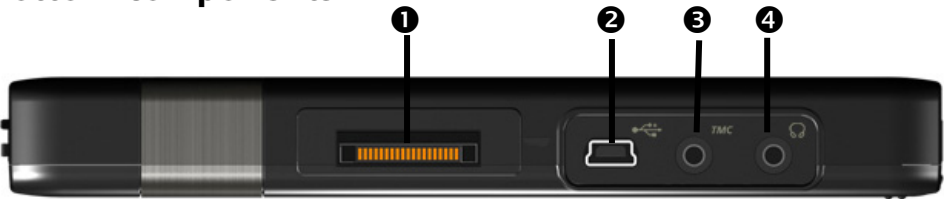

Ref	Component	Description
❶	Extension socket	For the expansion for future components.
❷	Mini-USB-Connector	Connection for connecting to a PC by means of a USB cable (for data transfer) as well as connection to external power supply.
❸	TMC connection	You also have the possibility to connect a TMC dipole antenna here.
❹	Headphone connection	Connection for a pair of stereo headphones (3.5 mm).
		<div></div> Using this appliance at full or high volumes for extended periods of time may cause damage to the hearing of the listener.


# Top Components

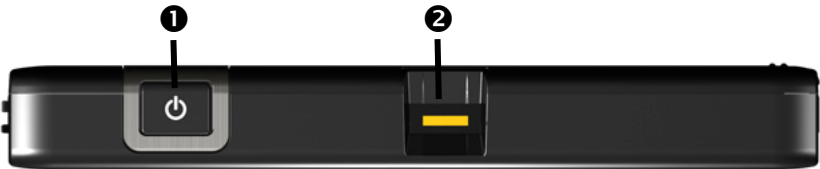

Ref	Component	Description
❶	On/Off button	Turn the device on or off by pressing and <b>holding</b> the <b>On/Off button</b> . You will switch to the stand-by mode or reactivate the device by quickly pressing the button (> ½ sec.).
❷	Fingerprint sensor	See page 26



# Right Components

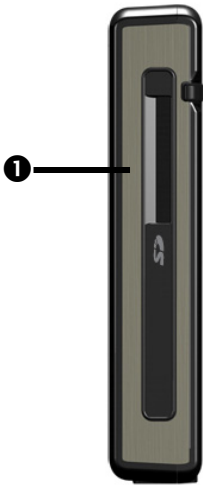

Ref	Component	Description
1	SD Slot	Accepts an <b>optional</b> SD (Secure Digital) card for removable storage.



# Left Components



Ref	Component	Description
❶	Volume control / Activation of the voice entry (optional)	<p>You can control the volume of your device as follows: You can increase the volume by turning the wheel upwards (+). You can reduce the volume by turning the wheel downwards (-).</p> <p>Press the wheel briefly to activate speech input (optional).</p>
❷	Main switch / Battery switch	Switches the device completely off (Hard Reset).
❸	Reset opening	Restarts your appliance (Reset, see page 30).



# Holder with extension socket (optional)

This holding casing offers extended possible connections and, in addition, it has a receiver for the optional steering wheel remote.

Proceed as described on Page 36 in order to connect your navigation system by means of this optional holding casing with expansion plugs.

**Attention !**

Please pay attention to the fact that the steering wheel remote will only be available in the case that an electricity supply has been connected.


## Front components




Ref	Component	Description
①	Holding clip	
②	Extension socket	Connection plug to the main device



## Back components

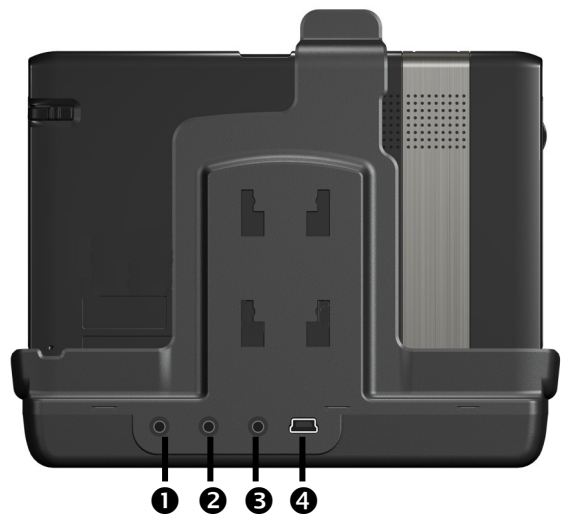

Ref	Component	Description
❶	TMC Connector	Connector for a TMC dipole antenna (serves to improve the reception, if no reception or only long-lasting inadequate reception is possible through the TMC aerial installed in the holder)
❷	Microphone	For connection of an external microphone (only for the models P5435 and X5535)
❸	Earphone connector	Connects to a pair of stereo headphones (3.5 mm).  Using this appliance at full volume for extended periods of time may cause damage to the hearing capacity of the listener.
❹	Mini-USB-Connector	Connection to an external electricity supply by means of a mini-USB plug (not to the data adjustment!)

### Attention!

Pay attention that the contacts are not touched, contaminated or short-circuited.



# Initial Set up

The following is a step by step guide to assist in the initial Set-up of the navigation system. Start by removing the protective plastic sheet from the display.

## I. Charging the Battery

The battery of your navigation system can be charged in the following ways:

- Using the supplied car adapter,
- using a suitable USB cable or
- by using a mains adapter (purchased as an optional extra).

### **Attention!**

It may be necessary to initially charge the battery for a considerable period of time prior to commencing and running through the initial installation, this is dependent on the level of charge held at the time by the internal battery.

Please observe the following notes:

- The charging status display LED will flash **orange** until the navigation system is charged. If possible, do not interrupt the charging process until the battery is fully charged. This may take a few hours. The charging status LED will shine constant **green** if the battery has a high level of charge. Leave the device charging for 20 further minutes, to ensure the battery is charged-up fully.
- The navigation system can be used during the charging process, but the power supply must not be interrupted during initial set-up.
- Leave the external power supply connected to the navigation system for around 24 hours, so that the backup battery also charges-up fully.
- The external power supply can remain connected; this is recommended for continuous operation.
- Even after a power source has been connected to the device it may take several minutes until the device is once again ready to operate again, this occurs if the charging state of the battery is exceptionally low. The battery will continue to be charged if the power supply is connected and the device is switched off.



## II. Power Supply

### Car Adapter



(similar picture)

1. Plug the jack (❶) of the connection cable into the corresponding receptor at the bottom of your navigation system.
2. Insert the power adapter (❷) into the cigar lighter socket ensuring, that it will not lose contact while driving. This could cause a malfunction.

### Alternative possibility of charging the battery

The battery will charge as soon as you connect your navigation device to a switched-on PC or notebook by means of a USB cable.

Please pay attention to the fact that **both** USB plugs of the USB cable supplied with the device must be connected to your PC or laptop to guarantee a sufficient supply of electricity.

No additional software or updates are required for your PC to perform this function. Do not interrupt the charging process if possible during the initial charge.


#### Note

The brightness will be adjusted downwards, if necessary, if a USB connection is being set up when the device is switched on.

It is recommended to set the device to the stand-by mode, in order to shorten the charging time by USB.



## AC Adapter (optional)

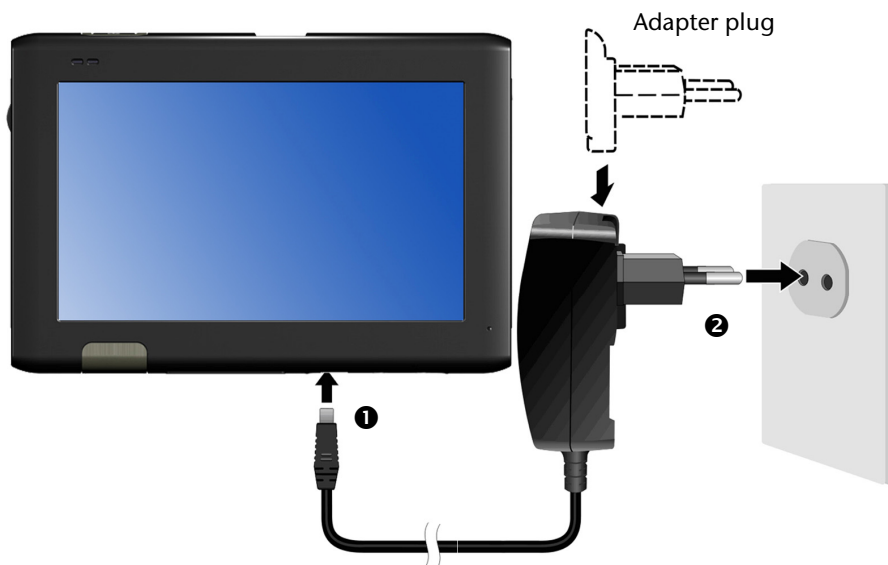
















**(similar picture)**

1. Push the adapter connector into the guide on the back of the AC adapter. Press the push button at the same time, so that the adapter plug can engage.
2. Plug the cable of the mains adapter (❶) into the mini-USB connection on of the navigation system.
3. Push the AC adapter (❷) into a power point that is easily accessible.



# III. Switching on the Device

Switch the main switch ( see page 13) to **ON**.  
The Navigation System will start the initial installation automatically. The brand logo will appear. Your device will display the application screen after a few seconds.

Button	Description	Main Screen
	Navigation, page 32	
	Travel Guide, page 64	
	MP3Player, page 54	
	Bluetooth Dialer, page 49	
	Contact Viewer, page 69	
	Alarm Clock, page <b>Fehler! Textmarke nicht definiert.</b>	
	Picture Viewer, page 58	
	Video Player page 61	
	Sudoku, page 73	
	Settings	
	Next page of the main screen	
	Previous page of the main screen	



### Note

**Brief pressure** on the **On/Off button** will be enough to switch the device on or off, provided that your navigation system is connected to an external source of electricity or is running in battery operation (standby mode). The device will be reactivated by **pressing** the On/Off button once (**> ½ sec.**).

You can adjust the period of operation to suit your needs using the **Settings** button on the main screen of your device. Your device is delivered in a status in which it will not switch off independently.

To switch your navigation system completely off, push the main switch to the **OFF** position.

No data will be lost as data is stored in the internal memory. The starting process will only take slightly longer.

Your navigation system will use a low amount of electricity and the batteries will be discharged, even when in standby mode.

## IV. Installing the Navigation Software

The final installation of the navigation software will take place automatically from the internal memory, during the initial setting up, if your device has already been equipped with the basic data of the navigation software at the factory. Follow the instructions on the screen.

An optional memory card must always be inserted in the device while the navigation system is being used.

It will be necessary to carry out a Reset to restart the navigation system if the memory card has been removed (see page 30).


Please also read the chapter **Navigation** starting on page 32.



# General Operating Instructions

## Switching on/off the device


Your device will be in its normal operating state after the initial setting up. You can activate and deactivate your device with the On/Off button.

1. To start your navigation system press briefly the On/Off button . The battery charge indicator will blink briefly and the application screen will appear.

### Note




Your device is delivered in a status in which it will not switch off independently. You can adjust the period of operation to suit your needs using the **Settings** button on the main screen of your device.

Your navigation system will use a low amount of electricity and the batteries will be discharged, even when it is in the standby mode.

2. To switch off your navigation system briefly press the Power button . The following screen will appear:



You have three possible choices:

Button Description	
	<b>Cancel/Back</b> Return to previous view with this key, if you have accidentally called up this screen.
	<b>Standby Mode</b> The device will go into Standby Mode if this key is clicked.
	<b>Reset</b> You can carry out a reset by clicking this key.



The device will go into the Standby mode automatically after a few seconds if you do not want to select any of these three possibilities.

For further settings within the Standby mode also see the chapter on “Special CleanUp Function”, page 77, point 8.


This display will also appear after the delay period of a few seconds has expired, if you have activated the DC AutoSuspend Comfort Function.




# Security

You have the possibility of protecting your device against external access by means of this function. Some one-off settings will have to be made before you will be able to use this function. Proceed as follows to do this:

## Storing the password and the information note


1. Go to the  settings by means of the main display.
2. Click on **Security**, in order to start the respective function. The following display will appear:



3. Click on , in order to enter a password.
4. A keyboard will appear. Enter a password with it.

### Note

The password must consist of at least 4 symbols. Use a combination of letters (A - Z) and numbers (0 - 9). Keep the password in a safe place.

5. Confirm the password with the  symbol after you have entered it.
6. Enter the password in the second field to reconfirm it and in order to avoid potential careless mistakes.

### Note


The password will be displayed in the form of small stars (\*\*\*\*).




7. An additional text field will appear after you have entered the password. Enter an information note here that will serve as a support for remembering your password. You will be able to call up this information if you have forgotten or mislaid the password.




# Making settings

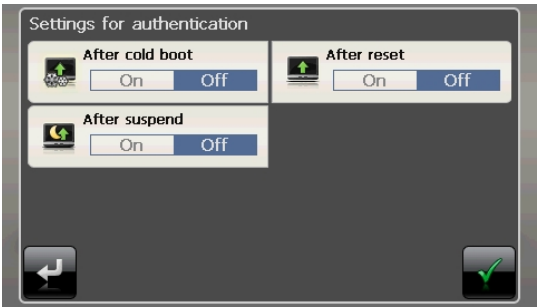The following selection window, through which you will make the settings for the Security Function, will appear after you have entered the password and the information note successfully.



Button	Description
	Set here whether the device should request the password after a hard reset.
	Set here whether the device should request the password after a restart.
	Set here whether the device should request the password after the device has been switched on from the Standby mode.


Confirm you settings with  during the set-up. The following screen will appear:





## SuperPIN and UUID

The SuperPIN and the UUID (Universally Unique Identifier = definite device identification) will appear on the display after you have confirmed the settings.

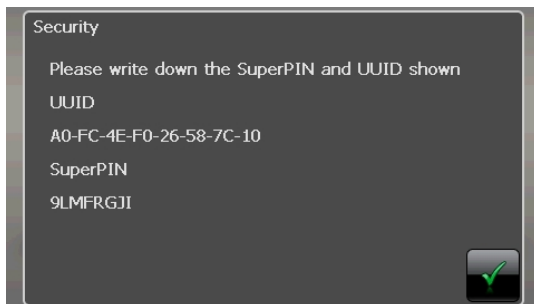

### **Note**

Record this data in your Operating Instructions (see Page 1) and keep them in a safe place.

You will need this information if you have entered the password incorrectly 3 times. The navigation device can then only be released with this information.



# Fingerprint Sensor

Your new navigation system is equipped with a **fingerprint sensor**.



## Benefits of this technology


Comfort is the first priority, because you no longer have to enter a password; simply prove your identity with your fingerprint.

### Note


Store your passwords and access data in a safe place. If you cannot identify yourself by your fingerprint (e.g., when working on someone else's device), you can log in with your access data in the usual way.

## Storing a fingerprint

1. Go to the  Active profile settings sub-menu and select the  Change fingerprint point there, to store your fingerprint.

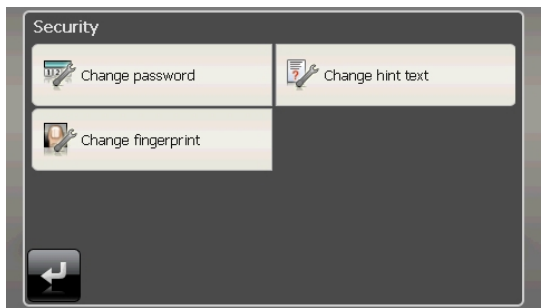


2. You will be requested to stroke your finger slowly across the sensor several times:

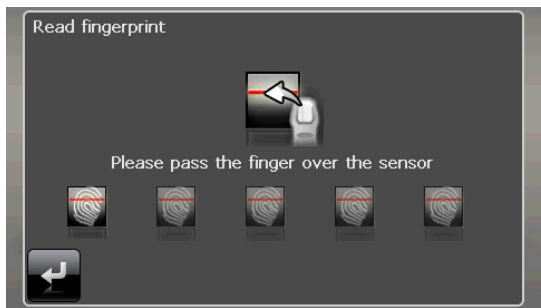




3. The following screen will appear if the scanning process of the fingerprint has been successful:

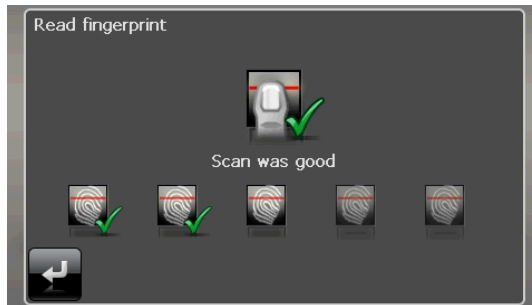

4. Repeat this process until the fingerprint has been scanned in successfully several times.
5. You will be requested whether you want to store the fingerprint that has been scanned in the following screen:




6. Confirm with .





Now, you will be able to log into your device with the stored fingerprint.

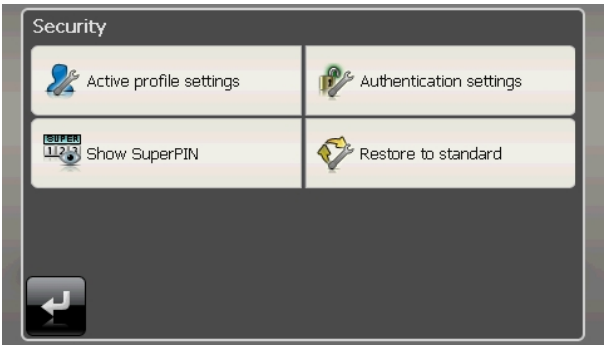

# Making subsequent settings

Start the Security Function if you have already entered a password or stored a fingerprint and would like to make a subsequent setting or to change the password. The following display will appear:





Button	Description
 Active profile settings	Change the password or the information text; Store /change a fingerprint
 Authentication settings	Authentication settings (see Page 24, Making settings)
 Show SuperPIN	Display SuperPIN and UUID (see Page 25)
 Restore to standard	Reverses the complete security function. All security settings and passwords will have been deleted after this function has been carried out. You will have to enter and confirm your password again to be able to carry out the security function.



# Password Request


A password request will appear at the restarting of the device, according to the setting, if you have established a **password** or a **fingerprint** by means of the Security Function.

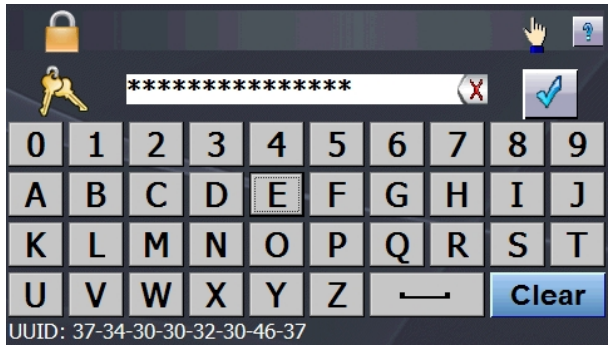

1. Enter the password stored by you by means of the keyboard or draw the finger (fingerprint) previously chosen by you across the sensor. The symbol  shows you if you have stored a fingerprint.

**Note**

The password will be displayed in the form of small stars (\*\*\*\*).

2. If you tap the question mark, the hint text you have established will be shown.
3. Click on  to confirm the entry.

**Note**

You will have to enter the SuperPIN if you have entered the password incorrectly 3 times. Contact your Service Center, giving the UUID, if you have also mislaid it. The UUID will be faded out in the lower display.



# Resetting the Navigation System

You can reset your navigation system if it is no longer reacting or working properly.

This option restarts the navigation system, without reinstallation being necessary. A reset is often used in order to reorganize the memory. In doing so all programs that are running are interrupted and the working memory is reinitialized.


You can carry out two different Reset procedures with your device.

## Soft Reset

### 1. Possibility

1. The following screen will appear if you press the On/Off button for a short time:



2. If you want to carry out a Reset, tap on .

You will find further information in the chapter “Switching on/off the device”, page 21.

### 2. Possibility

Press the tip of the stylus into the soft-reset opening or insert a pointy object (e.g. a paper clip, which has been bent open) with slight pressure into the reset opening.



## Switching the Device off Completely / Hard Reset

### Attention!

A hard reset will delete all data in the temporary memory.

Your navigation system will normally be in the Standby Mode, if you have switched it off by pressing the on/off button briefly. In addition, the system can be switched off completely; the consumption of energy can be kept as low as possible through this. All the data in the temporary memory will be lost if the device is switched off completely (hard reset).

To switch your navigation system off completely:

1. Push the **main switch** to the position **OFF** to switch the device off.
2. Push the **main switch** to the position **ON** again to carry out the Hard Reset.

A reinstallation will **not** be necessary after a hard reset if your device has already been equipped with the basic data of the navigation software in the permanent memory at the factory.



# Navigation

## Safety Instructions for Navigation

The bundled product DVD contains a comprehensive instruction manual.

### General Instructions

- Do not manipulate the navigation system while driving to protect yourself and others from accidents!
- In the event that you do not understand the voice instruction or if you are in any doubt about what to do at the next intersection, then the map or arrow display will provide you with a quick orientation. Only look at the display when you are in a safe driving situation!

#### **Legal remark**

The use of devices that warn for traffic monitoring systems (like „speed traps“) is prohibited in some countries, like Germany, Ireland and Switzerland. Please obtain information about the legal situation and apply the warning function only where allowed. We cannot be held liable for damages caused by the use of the warning function.

#### **Attention!**

The road layout and driving rules take precedence over the instructions of the navigation system. Only follow the instructions when circumstances and driving rules permit it! The navigation system will guide you to your destination even when you have to deviate from your planned route.

- The direction statements of the navigation system given do not release the driver of the vehicle from his or her duty of care or personal responsibility.
- Plan routes before you leave. If you want to plan a new route whilst on the road pull over and stop driving.
- In order to receive the GPS signal correctly, keep away from metal objects as they may hinder reception. Attach the navigation system onto the inside of the windscreen or near the windscreen with the suction cup. Try out different positions in your vehicle in order to find the best reception.



## Notes for Use in a Vehicle

- Take care that the holder does not present any risk to safety, even in the case of an accident, when installing it.
- Take care that the cable does not impede any safety components.
- The display of your navigation system may show “light reflections”. Please take care of not being “blinded” during operation.
- Do not mount the components within the operating range of any airbags.
- Check the secure adherence of the suction cup at regular intervals.
- The power plug will consume power, even if no device is connected. Remove it when not in use to avoid draining the car battery.
- Check all safety equipment in your car after installation.

### **Note**

Do not leave your navigation software in the vehicle when you leave it. You should also uninstall the holder for security reasons.

## Aerial Orientation

The aerial must have unrestricted access to the sky to receive GPS satellite signals. Place the aerial as horizontally as possible for this reason. Try out aerial and installation possibilities in the vehicle if the reception is inadequate.



# I. Mounting the Car Holder

## Attention!

Only fix the holder for the navigation system to the windscreen, if it does not impede the view.



(similar picture)

## Note

Your navigation device can also be equipped with a different but similar vehicle attachment as an alternative, according to the version.

## Note

Clean the disk thoroughly with a glass cleaner. Warm the disk and the nipple slightly at temperatures below 59°F (15° C).

Place the holder with the suction head directly onto the wind screen and press the lever on the suction head downwards. The sucker will attach itself to the background firmly.



## II. Attaching the Navigation System

1. Place the device below in the centre of the holder (❶).
2. Press it gently **backwards** (❷) until it engages audibly.
3. Connect the car adapter (see page 17) and, if necessary, the TMC aerial to your navigation system and insert the memory card.



(similar picture)

4. Place the holder on the fixing catches of the car holder.
5. Now, push the unit **downwards** until it engages audibly.
6. Now you will be able to place the complete unit on the cleaned windscreen.



## Fixing the navigation system via cradle with extension socket

You will find a detailed illustration of the optional holding casing with expansion plugs on Pages 14 and 15. Proceed as follows in order to attach your navigation system by means of this holding casing:

1. Place the device below in the centre of the holder (❶).
2. Press it gently **backwards** (❷) until it engages audibly.



**(similar picture)**

3. Connect the car adapter (see page 17) and, if necessary other connecting cables to the extension socket.
4. Place the holder on the fixing catches of the car holder.
5. Now, push the unit **downwards** until it engages audibly.
6. Now you will be able to place the complete unit on the cleaned windscreen or the suction plate.



### III. Connecting the Car Adapter



**(similar picture)**

1. Plug the jack (❶) of the connection cable into the corresponding receptor at the bottom of your navigation system (see Page 11).
2. Insert the power adapter (❷) into the cigarette lighter socket and ensure, that it will not lose contact while driving. This could cause a malfunction.

#### **Note**

Remove the power adapter from the cigarette lighter socket when ending a trip or when parking the car for a extended period of time. Otherwise the car battery could be drained. In this case use the power switch to turn off the navigation system.



## IV. Starting the Navigation Software

### Note

Your memory card will always have to be inserted into the device during the use of the navigation system, if the card contains (additional) mapping material.

It will be necessary to carry out a reset to restart the navigation system if the memory card has been removed while the system was being used (see page 30). According to the navigation system the reset is carried out automatically.

1. Switch on your navigation system.
2. The Navigation software will start automatically or after tapping on the navigation control button on the main screen, according to the version.
3. Tap on **Navigation** on the screen for entering the destination. Enter the destination address. Confirm your entry by clicking the ✓ symbol to start the navigation. After a short time, if the satellite reception is adequate you will receive augmented language statements.

Further information regarding the navigation software can be found on the comprehensive manual on your navigation DVD. This is a PDF-file you can read and print with any Acrobat Reader.


### Note


The GPS-receiver will require some minutes for initialization when deployed for the first time. Even when GPS signal reception is indicated the navigation could be imprecise. In all future instances it will take about 30-60 seconds until a correct GPS-signal is available, sufficient "sight" of the satellite is a prerequisite.




## Warning function for traffic monitoring points

The following display will appear if the warning function for traffic monitoring points (optional) has been installed:

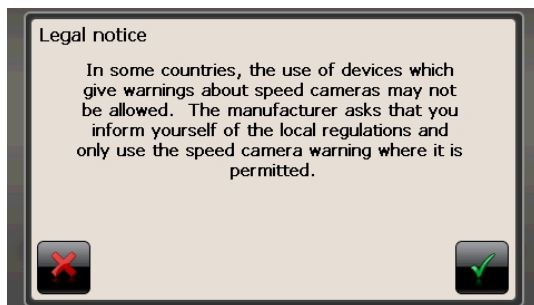


Confirm with , if you want to use navigation with the warning function for traffic monitoring points.

Click on the **Configure special destinations** interface in the **Settings** Menu, in order to configure the warning function.

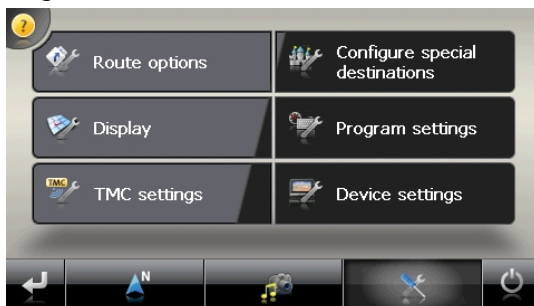

The following screen appears:

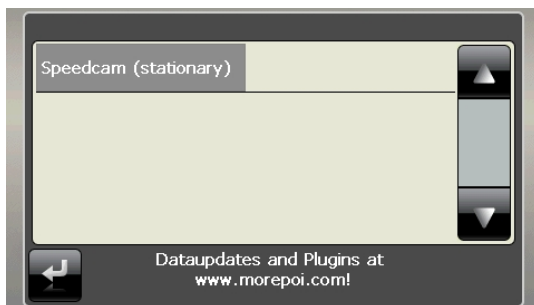



Click on **(Radars) fixes** here, in order to make the settings for the ‘radar fixes’:



Here, you have the option of having the traffic monitoring points represented on a map or faded out. You can also set whether you would like to be informed by acoustic signals before reaching a traffic monitoring point.

Acoustic information about a traffic monitoring point will be given by a warning sound approx. 15 seconds before it is reached. Then, another double warning sound will be given approx. 7 seconds before it is reached. Four warning sounds will give information that the speed is too high. In addition, the distance to a monitoring point will be indicated by a bar indicating closeness (left lower edge of the display).

Sample view if map presentation has been activated:



### Note

Please pay attention to the fact that traffic monitoring points are not preset in all countries.

### \* Legal remark

The use of devices that warn about traffic monitoring systems (like “speed traps”) is prohibited in some countries, i. e. Germany, Ireland and Switzerland. Please obtain information about the legal situation and apply the warning function only where allowed. We cannot be held liable for damages caused by the warning function.



# Integrated FM Transmitter (optional)


 

Depending on the software equipment your navigation system is equipped with an **FM transmitter** (UKW transmitter with a weak transmission performance).

For using the FM transmitter we recommend the power supply through the cigarette lighter. You will be able to transmit navigation announcements and other audio announcements from the navigation system to the car radio without a cable with the aid of the FM transmitter.

## Legal remark

The use of an FM transmitter is forbidden in some countries. Please obtain information about the legal position and only use this function where it is permitted. We shall not be liable for damages arising from the use of this device.

## Starting the FM Transmitter

 

 


To start the FM Transmitter, tap on    FM-Transmitter. Alternatively, the FM Transmitter can also be started from the navigation software itself.

## Overview of the main screen








# Description of the Interfaces

Button	Description
	To switch the FM Transmitter on/off
	Reactivate the FM transmitter (reactivation notification when the device is inserted into the holder)
	Setting the frequency (see page 42)
	Activates/deactivates the sample piece of music for the setting in the radio.
	Back
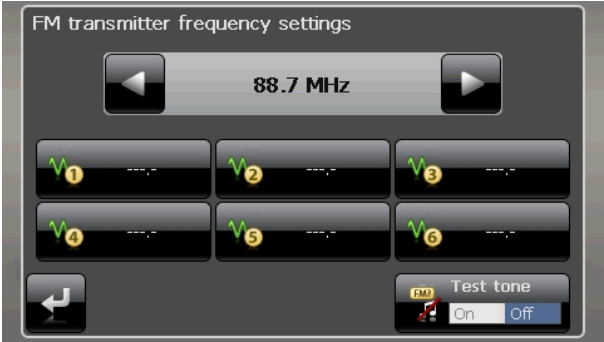
## Selecting the frequency



You can set the required radio frequency (UKW) here with the  and the  interfaces.


**Note**


Move to a different frequency (through the radio transmitter, for example) if the use of the frequency is overloaded. You have the possibility of storing up to six different frequencies.

1. Proceed as follows, in order to store the frequency currently set:
2. Choose the desired frequency.



3. Click on this interface longer, in order to allocate the respective frequency to a specific channel position. The following display will appear:

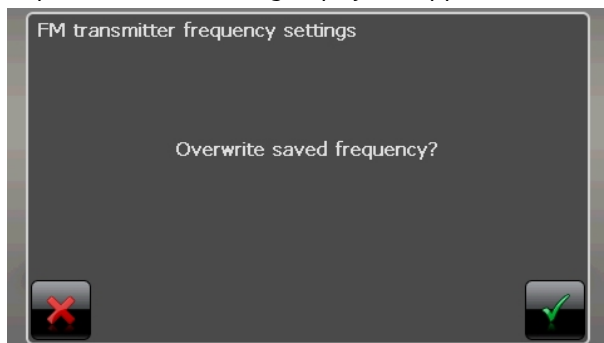

4. Confirm with .



# Speech commands (optional)

The Speech Entry mode can be activated by means of the function during navigation. A short information sound will indicate that the navigation system is ready for the speech entry.

Explanation of the symbol:

- ( ) optional words;
- [ ] Fillers
- „|“ Alternatives;
- < > Content displayed can be spoken

The following commands will be possible here according to the current view:

Range of validity	Command
Always applicable	<ul style="list-style-type: none"><li>• [main] menu</li><li>• no [ thank you ]</li><li>• yes [please]   okay</li><li>• accept</li><li>• [go] (back   backwards)</li><li>• (cancel   abort) [ dialog ]</li><li>• ( (enter   select) [a] [new]   new) (city   town   location)</li><li>• ( (enter   select) [a] [new]   new) destination</li><li>• ( (enter   select) [a] [new]   new) (zip [code]   postal code)</li><li>• help</li><li>• (general   global) (Help   Commands)</li><li>• [show] map [view]</li><li>• volume settings   change volume</li><li>• decrease volume</li><li>• increase volume</li><li>• mute volume   shut up</li><li>• unmute volume</li></ul>
Main menu	<ul style="list-style-type: none"><li>• (other   more) applications</li><li>• settings</li><li>• ( enter   select) [a] [new]   new) destination</li><li>• favourites</li><li>• (change   modify) tour   tour planning</li><li>• route information</li><li>• start (route guidance   navigation)   yes [please]   go</li><li>• stop route guidance</li></ul>



Range of validity	Command
<b>In maps</b>	<ul style="list-style-type: none"> <li>• [display show] (compass [view]   G P S view)</li> <li>• [display show] (dynamic   smart) (view   map)</li> <li>• [display show] next (view   map [view])</li> <li>• [display show] (normal simple) (map [view]   view)   [display show] only [the] map</li> <li>• [display show] (splitted (map   view)   arrow and map   map with arrows)</li> <li>• [display show] (3 D   three dimensional) [view   map   perspective]</li> <li>• [display show] (2 D   two dimensional) [view   map   perspective]</li> <li>• [display show] [2 D   two dimensional] (north   northern) [view   map [view]]</li> <li>• zoom in</li> <li>• zoom out</li> </ul>
<b>In the quick-menu</b>	<ul style="list-style-type: none"> <li>• [quick menu] settings</li> </ul>
<b>More applications</b>	<ul style="list-style-type: none"> <li>• (other   additional) applications</li> <li>• contacts   addresses   addressbook</li> <li>• travel guide</li> <li>• M P 3 [Player]</li> <li>• Navigation   Navi</li> <li>• Telephone   Phone</li> <li>• picture viewer</li> </ul>
<b>Volume settings</b>	<ul style="list-style-type: none"> <li>• decrease   (signal   keyboard click) volume)   (signal   keyboard click) volume) down</li> <li>• increase   (signal   keyboard click) volume)   (signal   keyboard click) volume) up</li> <li>• decrease   M P 3 volume)   M P 3 volume) down</li> <li>• increase   M P 3 volume)   M P 3 volume) up</li> <li>• decrease   speech volume)   speech volume) down</li> <li>• increase   speech volume)   speech volume) up</li> </ul>
<b>In lists</b>	<ul style="list-style-type: none"> <li>• next page   scroll down</li> <li>• previous page   scroll up</li> </ul>
<b>Detailed information</b>	<ul style="list-style-type: none"> <li>• hide map</li> </ul>
<b>Detailed information if Button is active</b>	<ul style="list-style-type: none"> <li>• (show   display) map</li> <li>• start (route guidance   navigation)   yes [please]   go</li> </ul>



Range of validity	Command
	<ul style="list-style-type: none"> <li>• (call   phone   dial) [number]</li> <li>• route options</li> </ul>
<b>Lastest destinations</b>	<ul style="list-style-type: none"> <li>• delete</li> </ul>
<b>For destination entry</b>	<ul style="list-style-type: none"> <li>• [enter   select   change] [the a] [new] (city   town   location)</li> <li>• [enter   select   change] [the] coordinates</li> <li>• [enter   select   change] [the a] [new] country</li> <li>• [enter   select   change] [the a] [new] house number</li> <li>• [to] [the] middle of [the] (road   street)</li> <li>• [enter   select   change] [a the] [new] [name of the] (street   road)</li> <li>• [to] [the] [city] center   downtown</li> <li>• keyboard [entry]</li> <li>• repeat [entry]   repetition   once again</li> <li>• [enter   select   change] [the a] [new] (zip [code]   postal code)</li> <li>• [my] favorites   (stored   my) destinations</li> <li>• start (route guidance   navigation)</li> <li>• [enter] new destination</li> <li>• points of interest POI</li> <li>• nearby</li> </ul>
<b>With favourites</b>	<p>delete   delete all favourites</p> <ul style="list-style-type: none"> <li>• new favourite</li> </ul> <p><b>If a new favourite has been entered:</b></p> <ul style="list-style-type: none"> <li>• [enter] new destination</li> <li>• point of interest</li> <li>• Current position</li> </ul>
<b>Tour planning</b>	<p><b>In the tour editor:</b></p> <ul style="list-style-type: none"> <li>• last known position</li> <li>• add destination</li> <li>• load   save</li> <li>• optimise route</li> </ul> <p><b>Tour planning</b></p> <p><b>In the tour file list:</b></p> <ul style="list-style-type: none"> <li>• Save [current] [route]</li> </ul> <p><b>In the route processing:</b></p> <ul style="list-style-type: none"> <li>• edit</li> <li>• delete</li> </ul>



Range of validity	Command
	<ul style="list-style-type: none"> <li>• rename</li> <li>• Save [current] [route]</li> </ul>
<b>Route information</b>	<ul style="list-style-type: none"> <li>• directions</li> <li>• (traffic [jam]   congestion) (information   situation   info)</li> </ul> <p><b>In the submenu traffic:</b></p> <ul style="list-style-type: none"> <li>• T M C settings</li> <li>• block route</li> </ul> <p><b>In the submenu block routes:</b></p> <ul style="list-style-type: none"> <li>• delete [all] [blockings   blocking]</li> <li>• go to</li> </ul> <p><b>In the submenu: go to</b></p> <ul style="list-style-type: none"> <li>• current position</li> <li>• destination [area]</li> <li>• overview</li> <li>• Start point   Start</li> <li>• [route] simulation</li> </ul>
<b>Settings</b>	<ul style="list-style-type: none"> <li>• route (options   settings)</li> </ul> <p><b>In the route options:</b></p> <ul style="list-style-type: none"> <li>• by pass</li> <li>• Ferries</li> <li>• Motorways</li> <li>• Toll roads</li> <li>• route type</li> <li>• [type of] vehicle</li> <li>• (map   display) [ settings ]</li> </ul> <p><b>In the display settings:</b></p> <ul style="list-style-type: none"> <li>• auto zoom</li> <li>• map colours</li> <li>• [ 2 D ] map orientation</li> <li>• map display</li> </ul> <p><b>Settings</b></p> <ul style="list-style-type: none"> <li>• (map   display) [ settings ]</li> <li>• Time format   Time display</li> <li>• Set language   language settings</li> </ul> <p><b>in the language settings:</b></p> <ul style="list-style-type: none"> <li>• Keyboard selection</li> <li>• Set language   language settings</li> <li>• T T S</li> </ul>



Range of validity	Command
	<ul style="list-style-type: none"> <li>• Device configuration</li> <li>• application settings</li> </ul> <p><b>In the program settings:</b></p> <ul style="list-style-type: none"> <li>• G P S Track</li> <li>• active map</li> <li>• speed limit  </li> <li>• Time format   Time display</li> <li>• (Units)</li> <li>• TMC settings   TMC [Sender]</li> </ul> <p><b>in the TMC settings:</b></p> <ul style="list-style-type: none"> <li>• Station search</li> <li>• Previous station</li> <li>• next station</li> <li>• T M C providers</li> <li>• by pass</li> </ul>

#### Note

Speak the commands loudly and clearly in the direction of the navigation system. No incidental noises (radio, ventilation or loud conversation) should arise during the speech entry.



# Handsfree Facility by means of Bluetooth (optional)

The Bluetooth technology serves to bridge short distances wirelessly. Bluetooth devices transmit data wirelessly, so that other devices that also support this technology can communicate with each other without cables.

Both devices will have to be adjusted to each other (pairing), before you will be able to use your navigation system as handsfree equipment with your Bluetooth mobile phone.

## **Note**

Please read how you switch on the Bluetooth function in the Operating Instructions of your mobile phone.

## Starting the Bluetooth Application

1. Click on **Bluetooth Dialer**.


## **Note**

The function for active use will have to be reactivated first if Bluetooth has been deactivated manually.

2. Now the main Bluetooth screen will appear on your navigation device.





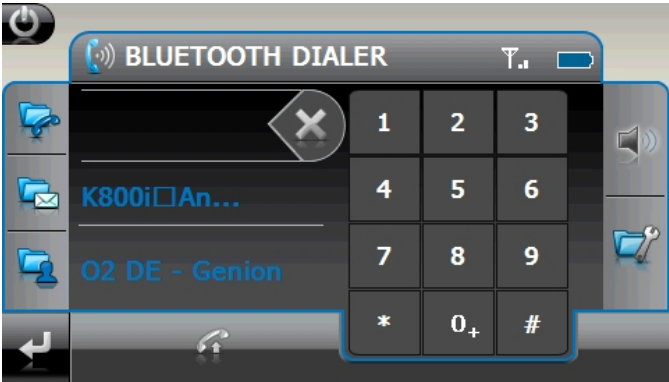




# Overview of the Main Screen



Button	Name	Description
	Exit	Leave the application by means of this field.
	Course of call	Displays the course of calls put through and received.
	News	View the postbox of your mobile phone through this symbol. You will be able to receive, write and send messages.
	Telephone Book	Call the contacts stored in the mobile phone through this symbol. The support of this function depends on the respective mobile.
	Back	Previous Page of the main display.
	Delete	Delete the number entered by means of the keyboard with this field.
	Calling	Select the number entered by means of the keyboard with this field.
	Keypad	Enter the digits of the telephone number to be called by means of the keyboard.
	Volume	Set the volume of the microphone and the loud-speaker by means of this symbol.




Button	Name	Description
	Settings of the hands-free facility	 Pairing – Link the navigation device to the mobile <hr/>  Settings for automatic SMS synchronization between the navigation device and the mobile phone <hr/>  Settings for automatic synchronization between the navigation device and the mobile phone <hr/>  Setting of the basic volume of the microphone and the loudspeaker. <hr/>  or  Activate or deactivate the Bluetooth function

## Pairing the Navigation Device and the Mobile Phone

1. Activate the Bluetooth function on your mobile phone.

### Note

Each mobile phone uses different paths to do this. Read the instructions of your mobile phone under all circumstances for this reason.


2. Select the  option (Pairing – link the navigation device to the mobile phone) under the settings of the open speech facility of your navigation device. The search for a Bluetooth-enabled device will start.
3. Select the corresponding mobile phone from the list.
4. Start the link by operating the **Pair** field.
5. Your mobile phone will recognize the navigation device. You will be requested to enter a 4-digit PIN code. This is 1 2 3 4 for your navigation device.
6. Your mobile phone will be recognized and the open speech facility through the navigation system will now be available to you.

 

### Note

This procedure will have to be repeated as soon as you have switched off the navigation system or a spatial separation between your mobile phone and the navigation device arises.




# Accepting incoming calls

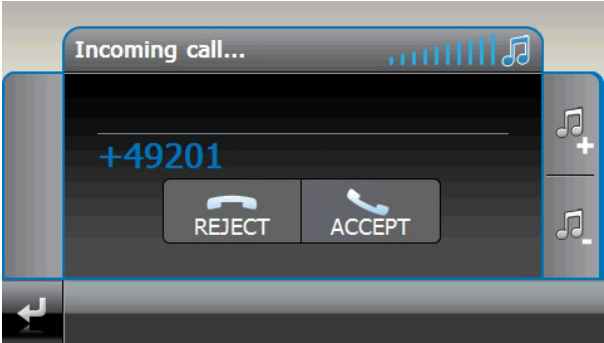


Button	Description
	Accept calls
	Reject/terminate calls





## Making Calls

1. Tap on the keypad in the main Bluetooth screen and enter the number that you wish to call.
2. Start the call with  .

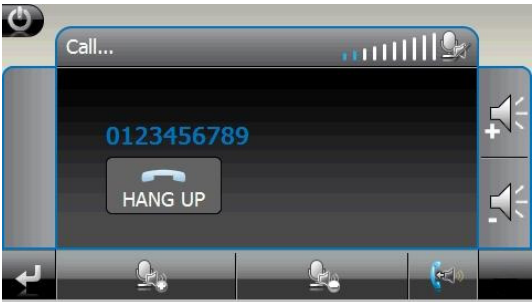

# During a Call



Button	Description
	End call
	Increase the volume of the microphone
	Reduce the volume of the microphone
	Return the conversation to your mobile




# MP3 Player (optional)






Depending on the software equipment your navigation system is equipped with a **MP3 Player**.

Start the MP3 player from the main screen by tapping the ‘**MP3 Player**’ switch area. Alternatively, the MP3 player can also be started from the navigation software itself.

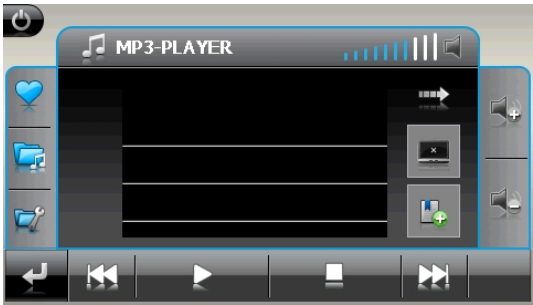








All the MP3 files located on the memory card can be taken over into a List of Favourites and will be ready to be played.

## Main Screen Overview



Button	Description
	Close the application
	Opens the List of Favourites
	For the title selection
	Changing the mode of playing: <b>Normal:</b> Plays all the files in their sequence and stops after the last file. <b>Shuffle:</b> Plays a file selected at random. <b>Repeat:</b> Repeats the current file continuously. <b>Repeat all:</b> Plays all the files in their sequence and will restart from the first file, after the last one has been played.
	Display of the current Reproduction mode




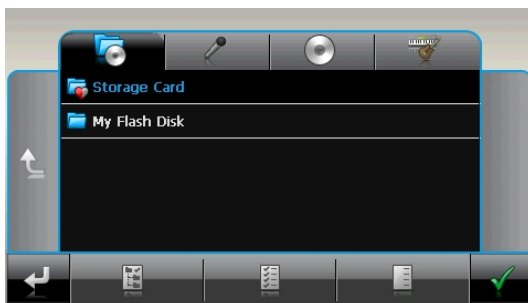
Button	Description
	Reduces the screen brightness to a minimum, to save electricity.
	Determine/add bookmarks
 or 	Increase or decrease the volume. The display in the upper right corner of the screen will show the current level of the volume.
	Break off action / Back to the previous Menu
 or 	Move to the previous or next file. It will be possible to skip backwards or forwards within the title playing while it is being played.
	Play the playback.
	Stop the playback






## Select a Title and Move it into the List of Favourites





Tap on  and select the title that you would like to move into the List of Favourites, in order to select a title.




You will have three possibilities of marking the title here:

- Tap on  in order to mark all the titles, including all sub-directories.
- Tap on  in order to mark all titles currently in view.
- Tap on  to delete all marks within a directory.

The selected titles will be indicated by a .


Tap on , in order to confirm your selection. The titles marked will not be moved into the List of Favourites **until then**.

Tap the file required and select the requisite title, in order to select a title in the sub-directories.


The  symbol will be shown if not all the titles in a directory have not been selected.



## List of Favourites

You will reach the List of Favourites by tapping on the  :




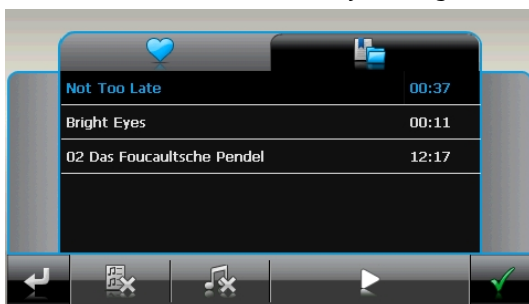
You will delete all titles with .

You will delete individual titles with .


Confirm with , in order to take over the new selection into the List of Favourites.

## List of the established bookmarks

You will reach the list of the established bookmarks by clicking on the  symbol :



You will delete all bookmarks with the  symbol.

You will delete an individual bookmark with the  symbol.

Operation with the  symbol to take over a new selection into the list of bookmarks.



# Picture Viewer (optional)


Depending on the software equipment your navigation system is equipped with a **Picture Viewer**.

You can view the jpg format images on your memory card on your navigation system, with the **Picture Viewer**. All the images on the memory card will be available immediately.

## Operating the Picture Viewer

Start the **Picture Viewer** from the main screen by tapping on the '**Picture Viewer**' switch area. Alternatively, the Picture Viewer can also be started from the navigation software itself.


## Main Screen

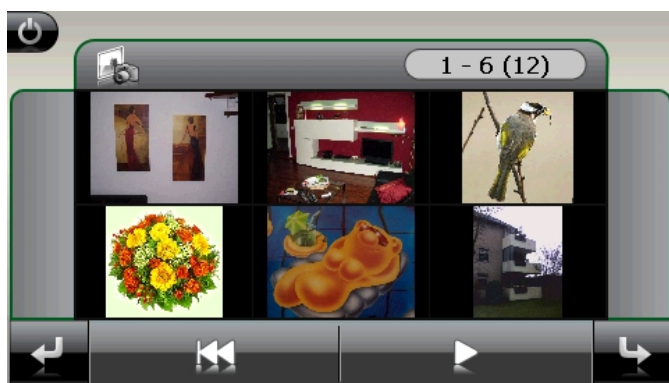


**Fig.: Miniature view**

Move the miniature view to the left or to the right with the **arrow keys**. Tap on a specific images to display it in the Full Image Mode.

Return to the start in miniature view by tapping on .

You can end the application by tapping on the  symbol.

Start the **slide show** by tapping the  symbol.



# Full Image View



Fig.: Full image view without service strip

Tap in the **lower** area of the screen in the full image view, in order to activate the **service strip**:

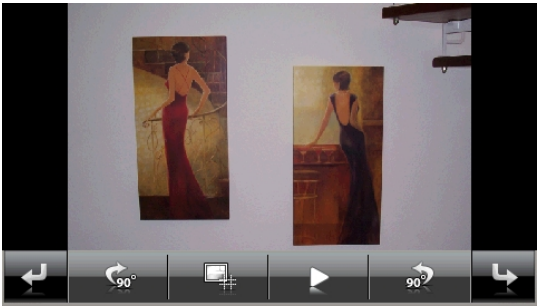











Fig.: Full image view with service strip

Button	Description
	Previous picture
	Turn it clockwise by 90° in stages
	Fade in grid
	Start the slide show
	Pause the slide show
	Turn it counter-clockwise by 90° in stages
	Next picture

You can return to the miniature view by tapping in the centre of the image.




The image displayed will be subdivided into 6 fields by tapping on the  symbol (fade in grid).

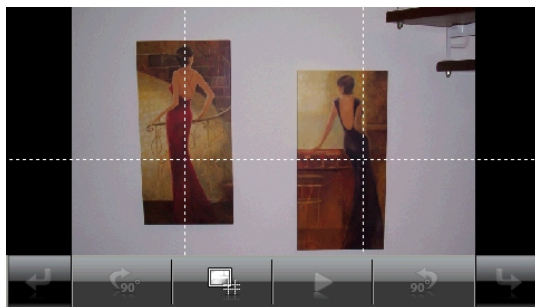

**Fig.: Full image mode with grid**

Tap on a square in the grid to zoom in on that area of the picture:

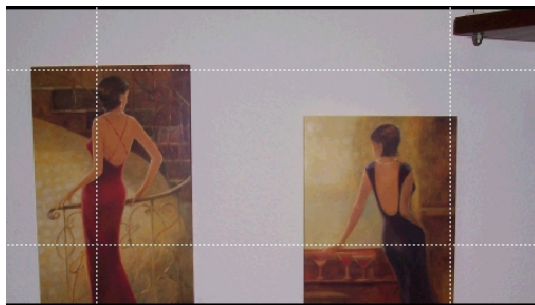

**Fig.: Zoom-in Mode**

Tap on the centre of the image to go back to viewing the full picture.




# Video Player (optional)


Depending on the software equipment your navigation system is equipped with a **Video Player**.


Start the Video Player from the main screen by tapping the **Video Player** button.

## Main Screen Overview

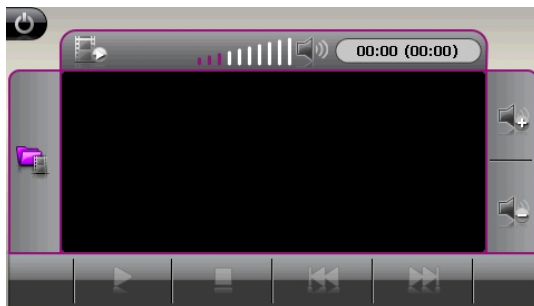


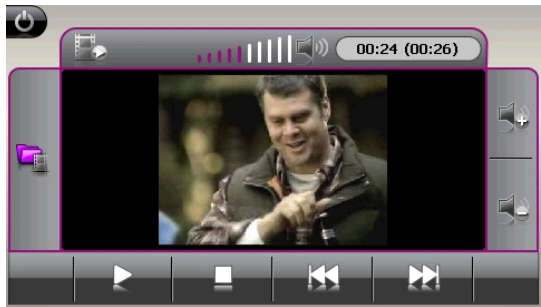
## Selecting and playing video

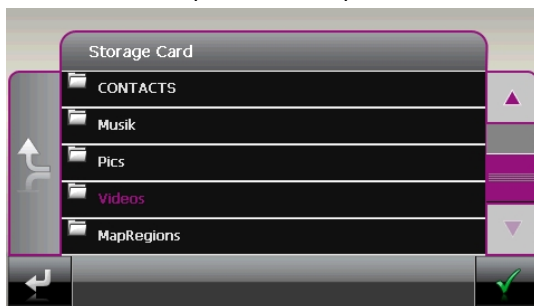


 








Tap on  on the main screen to open the file explorer:





Select the desired video and confirm with :



Button	Description
 or 	Forward / Backward
 or 	Increase or decrease the volume.
	The display in the upper right corner of the screen will show the current level of the volume.
	File Explorer
	Play the playback.
	Pause the playback.
	Stop the playback.
	Confirming an action
	Return to the previous menu.
	Close Video player.



# Travelguide (optional)

Depending on the software equipment your navigation system is equipped with a **Travelguide**.

The Travel Guide will supply general information about the different areas of individual towns and cities or regions in Europe, such as sights, restaurants, culture and travel information.

Start the **Travel Guide** from the main screen by tapping the '**Travel Guide**' switch areas. Alternatively, the **Travel Guide** can also be started from the navigation software itself.

Select the **country** initially, then the **town or city** (or the **region**). Then, select the category.

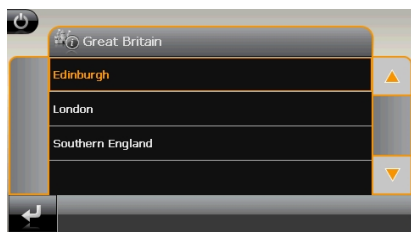


Fig. 1

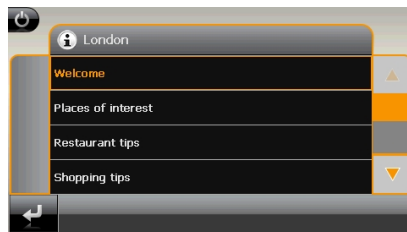


Fig. 2

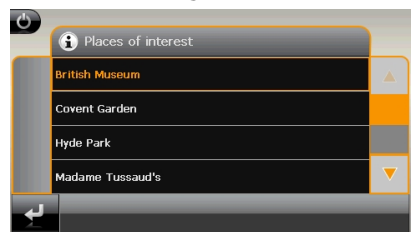


Fig. 3

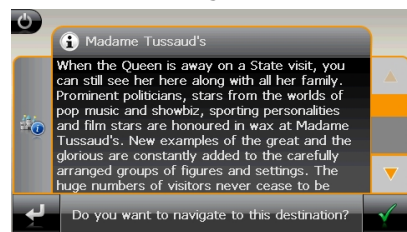



Fig. 4

Confirm with , if you want to navigate to the destination displayed. The address will then be available to the navigation software as the destination.



# AlarmClock (Wake up function) (optional)


Depending on the software equipment your navigation system is equipped with a an **AlarmClock/ Wake up function**.

Start this function from the main screen by tapping on the '**Alarm Clock**' button.

The waking function can work both as normal when the device is switched off (Standby Mode / Power Saving Mode) and as a reminder during the current navigation.

 










## Overview of the main screen



This view will appear if you have not yet set up a waking time. Enter an alarm time in the **24-hour format** and confirm your entry with .




# Description of the Interfaces


Button	Description
	Current system time
	Setting-up mode (Setting volumes, system time and alarm)
	Night mode (Standby mode)
	Reset/deactivate the waking function
	Setting the alarm time
	Delete the entry
	Confirmation interface
	Reduce the volume
	Increase the volume
	Back to the previous menu
	Close the application




## Setting the System Time

The display of the current time will be located in the upper right corner of the screen. You can adjust it as follows:

1. Tap on  in the main screen. The following screen will appear:

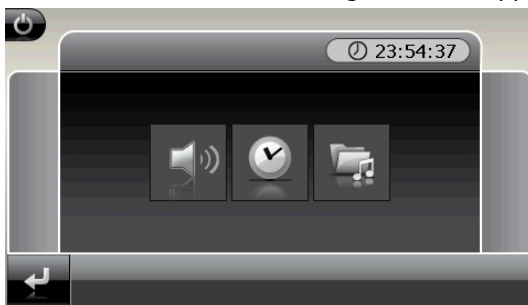


2. Tap on  to change the time setting.


### **Note**




The system time is updated by GPS reception. Pay attention to the time zone settings.




## Selecting an Alarm Signal

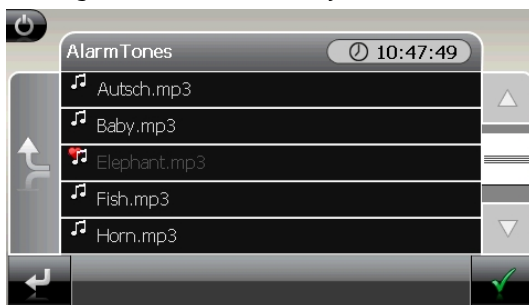1. To select an alarm signal touch the  symbol.




2. Select the desired alarm sound and confirm the selection with .
3. The selected alarm signal is marked by a .
4. Close the application with .

## Setting the Volume

You can adjust the volume of the alarm signal by tapping on the  interface.

### Note


The volume configured here only relates to the alarm signal and will not change the volume of the language output of the navigation system or other functions of the system.

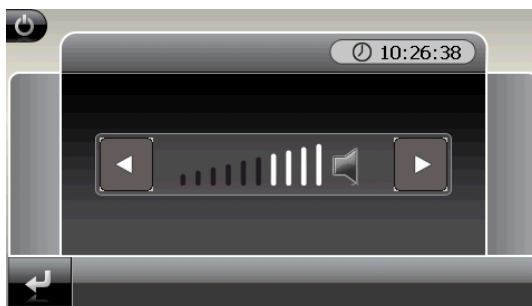





## Snooze Function



You will have the possibility of making the waking signal repeat **at regular intervals** by means of the Snooze function, once it has sounded at the alarm time set.

1. Tap on  to activate the Snooze function.



2. To be wakened again at the same time on the following day tap on the  button.
3. Tap on  to return to the screen before the alarm signal started.

## Ending the Alarm Clock Application

1. Tap on  to deactivate the alarm time set.
2. You will find yourself in the Setting-up mode.
3. Tap on  in order to leave the application. An alarm time is not set.



# Contact Viewer (optional)

Depending on the software equipment your navigation system is equipped with a **Contact Viewer**.

You will be able to create the contacts database (from Outlook 2003 or Outlook XP) and administrate your contacts with the **Contact Viewer**.

## Create the contacts database

The Contact Viewer will search for the contacts database on your **storage card** and in **'My Flash Disk'**, in order to deposit contacts. The **'contacts.db'** file must be present in the **contacts** sub-directory for this purpose:

- \Storage Card\contacts\contacts.db or
- \My Flash Disk\contacts\contacts.db


### Note

The memory card must not be write-protected.

The more recent contacts database will be used if one is found both on the **Storage Card** and in **My Flash Disk**. The internal date (date of creation) will be decisive to the selection of the database.

You will be able to the export contacts from Microsoft Outlook with the Medion GoPal Assistant. Proceed as follows to do this:

1. Connect your navigation system to the computer or insert a storage card into your card reader.
2. Select the destination for the synchronization (memory card or internal memory of the device) in Gopal Assistant.
3. Select **Synchronize**.
4. Activate the **Export Outlook Contacts** Option.
5. Confirm with **Synchronize**.
6. The contacts database will be transferred to your navigation system.

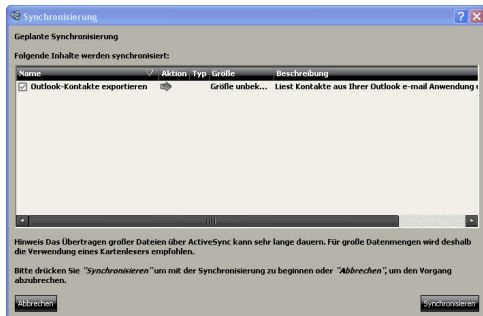




# Operating the Contact Viewers

Start this function from the main screen by tapping on the **Contact Viewer** button.

## Contacts list view




- Select the blocks of initial letters, such as ABC or DEF, with the buttons to the left and the right in the upper list.
- You can have all the contacts displayed by tapping the  interface.
- The **LAST** Button displays the last 10 contacts selected and the contacts starting with a particular number will be displayed by tapping the **123** interface.




## Visiting card view

The address and telephone number of the person currently selected will be displayed in the Visiting card view. You will be able to transfer the address to the navigation system and the telephone number to the mobile phone from here.

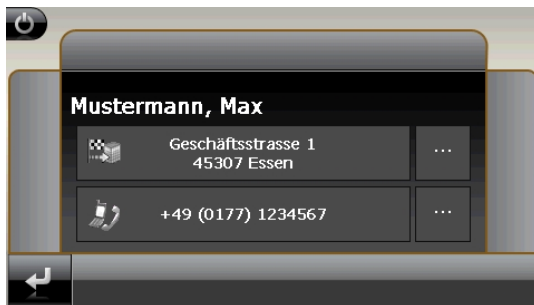

Tap on the light grey button with the address or the telephone number to do this. The following screen will appear:



 






The address will be passed on to the navigation system and the destination guidance will be started by tapping on the  interface.

The relevant button will not be displayed, if no address or telephone data have been stored for the contact.

You will return to the Contacts list view by tapping on the  interface.




The symbols show the type of contact:


Symbol	Description
	General address without type information
	Private address
	Business address
	General phone number without type information
	private phone number
	Business phone number
	Mobile phone

## Selection of addresses and phone numbers

It will be indicated by a dark grey arrow button, if several addresses for a contact are available. A list displaying all the address stored in relation to the selected contact will be displayed by means of this button. You will return to the Visiting card view by selecting an entry in the list. The address on the light grey button will be adjusted according to the selection.

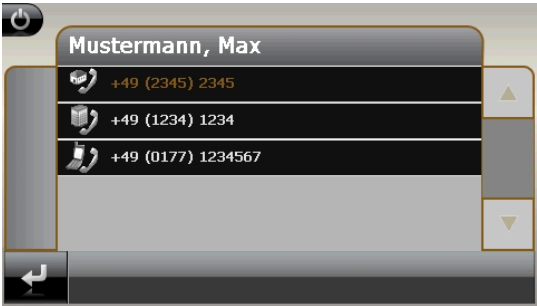

You will be able to select telephone numbers in the same way, if several of them are available for one contact.

You will return to the Visiting card view, without changing the old address, by tapping on the  interface.



# Sudoku (optional)

Depending on the software equipment your navigation system is equipped with the game **Sudoku**.

Start the game from the main screen by tapping on the **Sudoku** switch field.

Sudoku is a number puzzle. The puzzle area is square and subdivided into nine sections. Each section consists of 9 smaller squares.

When playing Sudoku, the **aim** is to fill all the 81 number fields using the numbers 1-9. Each number must only appear once in each section at the same time. Each number must only appear once in each row and column.

Some number fields will already have been populated prior to the start of the game.












## Main Screen



## Description of the switch fields


Button	Description
	<b>Strip of numbers to be entered</b> Strip for the selection of the numbers to be entered in the number fields. The selected number will stand out and it will now be possible to enter it into a number field.
 or 	<b>Entry mode</b> First, tap on the number in the strip of numbers to be entered that should appear in particular number field and then on the corresponding number field. <b>Deletion mode</b> Tap on the number to be deleted.





Button	Description
	You will receive the information about the deletion by tapping on this switch field.
	Conceal the information about the deletion.
	A new Sudoku game will open by a tap on this switch field.
	<b>Settings</b> You will have the following possibilities in the Settings Menu: <div> <div>Flash Disk</div> <div>Flash Disk</div> <div>Removable Card</div> </div> <div>    <div> <div>1</div> <div>2</div> <div>3</div> <div>4</div> </div>    </div>
	Leave the application by means of this field.



# FAQ

 Where can I find more information on the navigation system?


 Detailed operating instructions for navigation can be found on the corresponding CDs/DVDs, which accompany your navigation system. Also use the additional Help functions that are available with a single touch of a button (usually F1 on the PC), or by selecting the Help option, as additional assistance. These aids will be provided to you while you are using the computer or the device.


 What do I need the accompanied CDs/DVDs for?


 The CDs/DVDs contain:

- the ActiveSync<sup>®</sup> program for balancing data between the navigation system and the PC.
- Additional programs (optional).
- This User manual in digital form.
- digital maps
- PC-application for rapidly resetting the data material
- Manual of the navigation software

Depending on the configuration one or more CDs/DVDs may be included in the package.

 The navigation system is no longer responding. What should I do?

 Carry out a reset (see page 30).

 How can I adjust the lighting?

 Under Settings.



# Customer Service

## Faults and Possible Causes

**The navigation system no longer reacts or is behaving atypically.**

- Carry out a reset (see page 30).

**The navigation system is recognized only as a guest by ActiveSync®.**

- See information on page 82.

**The GPS receiver cannot be initialized or found.**

If a GPS signal continues not to be reported on the screen, in spite of the correct installation of the system, this can be caused by the following factors:

- Sufficient satellite reception is not possible.

**Solution:**

Change the position of your navigation system and ensure that unrestricted “sight” of the aerial is not impaired.

**No language statements can be heard.**

- Check the volume setting.

## Additional Support

If the suggestions in the above section have not solved your problem, please contact our customer service hotline. However, before you contact your customer service hotline, please have the following information available:

- How is your navigation unit configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- If you have been given a customer number previously, please give this number to the technician.



# Appendix

## Special CleanUp Function

The CleanUp function serves the targeted deletion of data, without using a PC.

### Note

Please use this function very carefully, because it is possible for data to be deleted that can only be entered again manually afterwards.

The CleanUp function is activated when the 'o' is pressed in the Gopal lettering of the Main Menu, immediately after the start tone following a reset.

**The CleanUp function offers 10 options:**



### 1. Remove Installation Only

Removes the software installed from the '**My Flash Disk**' memory [= part of the permanent memory in which the executable parts of the navigation software will be located following the initial alignment (\My Flash Disk\Navigation)].

### 2. Remove MAP Only

Removes the digital maps from the '**My Flash Disk**' memory (\My Flash Disk\MapRegions).

### 3. Remove Preload Only

Removes the data needed for the installation of the navigation software from the permanent memory (\My Flash Disk\Install).

### 4. Remove All

Deletes the whole contents of the '**My Flash Disk**' memory. It will not be necessary to recalibrate the screen after this function has been carried out.

### 5. Factoryreset

Sets the device back to the delivery status in the case of an intact main installation.



## 6. Format Flash

Formats the internal **'My Flash Disk'** memory. This formatting can be necessary in the case of a prolonged removal of errors. It will be necessary to recalibrate the screen after the formatting function has been carried out. All data will be deleted from the internal **'My Flash Disk'** memory irrevocably.

## 7. GPS Factory Reset

Performs a factory reset of the GPS receiver. When using the GPS function after having performed a factory reset, the GPS receiver must orientate itself again. This process may take a while.


## 8. DC AutoSuspend

You can select here when your navigation system should go into Standby mode automatically after the withdrawal of the external power supply. For example, this function is useful in the case of vehicles where the cigarette lighter also switches off when the ignition is switched off.

The AutoSuspend function will be activated several seconds after the discontinuation of the external power supply and the Standby display will appear for the time set (see Page 21).

The DC AutoSuspend function will be deactivated again if the power has been reconnected within the total period (in the case that the engine has been switched off for a short time, for example). Otherwise, the navigation system will go into the Standby mode after the expiry of the time set.

Set the required time by clicking on it and confirm your selection with OK.

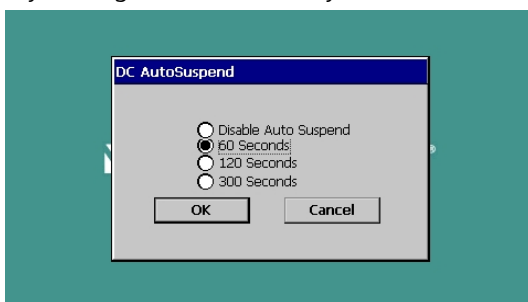

### Note

This function is deactivated and can be set individually in the status at delivery and after a hard reset (see Page 31).



9. DRControl

Here you can switch on/off the Dead Reckoning (see page 83).



Note

This function is **only** available with model **X5535**.

10. Exit

Leaving the CleanUp function and restarting the device (like reset).

Note

The deletion of the data must be confirmed before the action actually takes place. To do this, press on YES. There will be a corresponding report if the data to be deleted is no longer available.  
Please read the **“Transferring Installation Files and Map Material to the Internal Memory”** chapter on Page 92, in order to recreate the files (installation files and map material) in the internal memory.



# Synchronisation with the PC

## I. Installing Microsoft® ActiveSync®

In order to transfer data between your PC and your navigation system you need the Microsoft® ActiveSync® program. The cost of the navigation system includes a license for this program which can be found on the CDs/DVDs.

### Note

You will not need the ActiveSync® communications software, if you are a user of the Windows Vista® operating system. The system files necessary for the simple data transfer are already integrated into your Vista® operating system.

### Procedure for Vista users:

Please connect your device to your PC with the help of the USB synchronization cable. The necessary drivers will be installed automatically, after the new device has been found. Your new device will be listed under the 'Portable Devices' point in the Windows Explorer overview, following a successful installation.

### Attention!

Important files can be overwritten or changed during the installation of software. You should create a hard disk backup, in order to be able to have access to the original files in the case of possible problems following the installation.

You must have administrator rights to install the software under Windows® 2000 or XP.

### Important

You should not connect the navigation system to your computer yet.

1. Insert the CD/DVD and wait until the program starts automatically.

### Note

If it does not function, the Auto Run function is probably deactivated. The Setup program on the CD/DVD must be started, to start installation manually.

2. Choose the language, click then **Install ActiveSync®** and follow the instructions on the screen.

### Note

When installing the GoPal Assistant, ActiveSync® will be installed automatically.



## II. Connecting with the PC

1. Press the On/Off button to start your navigation system.
2. Connect the USB cable to your navigation system.
3. Push the USB connector into a free USB port on your computer.
4. The hardware installation assistant will recognize a new appliance and installs a suitable driver which can take some minutes. Repeat the connection search if it fails the first time.
5. Follow the instructions on the screen. The program will now set up a partnership between your PC and the device.

### Alternative possibility of charging the battery

The battery will charge as soon as you connect your navigation device to a switched-on PC or notebook by means of a USB cable.

Please pay attention to the fact that **both** USB plugs of the USB cable supplied with the device must be connected to your PC or laptop to guarantee a sufficient supply of electricity.

No type of software or driver installation will be necessary for this. Do not interrupt the charging process if possible during the initial charge.

#### **Note**

The brightness will be adjusted downwards, if necessary, if a USB connection is being set up when the device is switched on.

It is recommended to set the device to the stand-by mode, in order to shorten the charging time by USB.



### III. Working with Microsoft® ActiveSync®

ActiveSync® will be started automatically if you connect your navigation system to the PC. The program will check whether the device is one with which a partnership has been entered. If this is the case, the changes that have taken place on the PC and on the navigation system since the last synchronisation will be compared and adjusted to each other. You will be able to define exactly which data will have priority during the synchronisation in the settings of the ActiveSync® Program. Call up the Help of the Program (with the F1 Button), in order to become familiar with the effects of the respective settings. A restricted **Guest Access**, with which you will be able to exchange data, for example, will become active automatically if the navigation system has not been recognised as a partner. If this is the case, although the process concerns the registered partner device, separate your navigation system from the PC and switch it off and on again. Now connect your navigation system to the PC, to restart the recognition process. Repeat the process and, restart your PC in addition, if your device continues to be recognised as a guest.

#### **Note**

Make sure that you always connect your navigation system to your PC with the same USB connection, otherwise your PC will allocate an additional ID and reinstall the device.



## GPS (Global Positioning System)

GPS is a satellite-backed system for determining your position. With the help of 24 satellites revolving around the earth, it is possible to determine your position on earth with the accuracy of a few meters. The satellite signals are received by the antenna of the built-in GPS receiver, which must have a "line of sight" to at least 4 of these.

### **Note**

When the line of sight is interrupted (eg in tunnels, between houses, in woods or also in vehicles with metal-coated windows) it is not possible to determine the position. The satellite reception however automatically picks up again as soon as the obstacle has been passed and the line of sight is re-established. Moving slowly (e.g. slow walking) also limits the accuracy of the navigation.

The GPS receiver consumes additional power. This is especially of concern when running on batteries. To conserve power do not turn on the GPS receiver unnecessarily. Also terminate the navigation software if it is not needed or satellite reception is not possible for a longer period. You can also switch the device off by means of the On/Off switch if you experience a short interruption in your journey, pressing the same switch again will reactivate a restart. The GPS receiver will also be reactivated at the same time, if the navigation software is still active. There may be a delay for the position to be updated again, this is dependant on the reception situation.

### **Note**

Please note that your appliance is preset to not shut down automatically after a few minutes without activity. You can change this preset in the Settings mode. If the GPS receiver has not been active for some hours, it must orientate itself again. This process may take a while.

## Dead Reckoning (gyroscope) (only in the case of Model X5535)

The current position can be established momentarily, for driving through a tunnel, for example, with the aid of this function, even without a valid GPS signal.

The navigation system will receive the necessary information during the absence of the GPS signal for a short time, to continue to establish the position through an installed magnetic field and acceleration sensor.

The methods for establishing the position by means of the sensor described represents merely one device, so that deviations can arise. Sufficient GPS reception must be available before the transfer to establishment of the position by means of dead reckoning because of the system.

Dead reckoning is not a complete replacement for GPS-supported navigation.



## TMC (Traffic Message Channel)

The **Traffic Message Channel (TMC)** is a digital radio data service that functions in a similar way to RDS and is used to transmit disruptions to traffic to a suitable reception device.

The traffic information is continuously transmitted across FM.

The user is less dependent on the half-hourly broadcast traffic information, because the signal is continuously transmitted. Apart from this, important information, as in the case of an accident in the road ahead, can be passed on immediately.

The transmission is planned for the whole of Europe and is already offered by radio transmitters in many countries. The precision of the TMC messages can deviate greatly according to the country. At time of printing a TMC service is not available in Ireland.

The evaluation of TMC messages is not supported by every type of navigation software. Enquire whether your system supports TMC before the possible purchase of a TMC receiver.

## Pay TMC (optional)

PayTMC is interpreted as TMC Services that offer TMC information free of charge, such as TMCpro in Germany, Trafficmaster in the UK or V-Traffic in France, for example. These providers are distinguished from normal 'free TMC' because of more up-to-date information about the traffic flow.

Sensors in motorway bridges and set into the carriageway, and a large number of vehicles equipped with 'floating car' data technology, supply a more precise and up-to-date picture of the traffic situation on German highways, inc. possible predictions, quickly.

The licence fees for the use of the PayTMC services will have already been settled with the purchase of your navigation system and these services will be available to you for as long as they are offered on the part of the provider.

Your navigation system will support both free TMC and PayTMC and will have been preset for the reception of both services in the status at delivery.




## Connecting an additional TMC Dipole Aerial (optional)

A TMC receiver and an active TMC dipole aerial are already integrated into your navigation system, to receive traffic information. However, if the TMC signal is too weak, you have the possibility to connect an additional TMC dipole antenna:

1. Plug the jack plug of the TMC angled aerial into **the TMC connection** of your navigation system.
2. Attach the aerial, on the edge or your windscreen, for example, with the help of the sucker.
3. Place the aerial so that a distance of approx. 10 cm from the metal frame of the screen is maintained.

TMC reception can be improved by different aerial positioning, according to the vehicle.

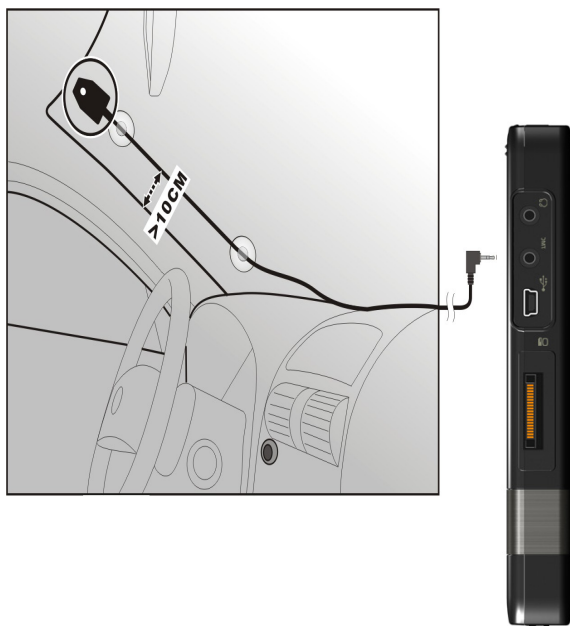

(similar pictures)

### Note

You will also be able to connect the internal aerial to the optional holding casing with expansion plugs.

Your navigation system will now be able to receive traffic information through the TMC receiver and thus direct you away from disruptions to traffic.



## The Remote Control (optional)

Operation with the remote can only be used in connection with the optional holding casing with expansion plugs.

## Safety Instructions





- Always pay attention to the road traffic and never make settings while driving.
- Installation within the steering wheel, in order not to impair driving.
- Pay attention to the safety information related to your navigation system.

## Batteries and Proper Treatment

- **KEEP CHILDREN AWAY** from batteries. If by any chance, the batteries are swallowed, consult a doctor immediately.
- **DO NOT CHARGE** batteries (except rechargeable batteries).
- **DO NOT FORCIBLY DISCHARGE** batteries.
- **DO NOT SHORT-CIRCUIT** batteries.
- **DO NOT HEAT** or **DISPOSE OFF IN FIRE**.
- **DO NOT DISASSEMBLE** or **DEFORM** batteries. Your hands and fingers may be injured, or the liquid of the battery may get into your eyes or adhere to your skin. If this happens, rinse with a large quantity of water immediately and consult a doctor.
- **DO NOT** expose batteries to strong impact by dropping or throwing the batteries.
- **DO NOT** reverse the positive (+) and negative (-) terminals to avoid short-circuit.
- **Do NOT MIX** used and new or different types of batteries together. Your equipment may not operate properly. In addition, the battery exhausted first may be excessively drained (over-discharged).
- **REMOVE PROMPTLY** the used batteries from the device.
- **REPLACE ALL BATTERIES** with new batteries of the same type at the same time.
- **INSULATE THE TERMINAL** parts with tape or the like at the storage or disposal of the batteries.
- **DO NOT** throw rundown batteries in the domestic refuses! Respect the environment and throw them in the specific containers for separate collection. If necessary, turn to your reseller or to our service assistance. Thank you!




# Button Layout

	▶	Replay and Pause in the case of the use of an MP3-player
	◀◀	Previous title
	▶▶	Next title
	▲	Navigation button
	▼	Navigation button
	◀	Navigation button; this button is always occupied by the function on the right under the display in Navigation Mode
	▶	Navigation button; this button is always occupied by the function on the left under the display
	OK	Confirm your selection
		Accept a call
		Terminate a call
		Readiness mode - Power off if the button is pressed for a long time
	+VOL	Increase the volume
	-VOL	Decrease the volume



# Installation

<p>1. Open the battery compartment of the remote.</p>	
<p>2. Place two button batteries (type: LR44, 3V) into the battery compartment. Pay attention that the polarity corresponds to the illustration engraved in the battery compartment (+ and + and – and – must agree).</p>	
<p>3. Open the support on the cover of the battery compartment and lay it around the steering wheel together with the cover of the battery compartment.</p>	



4. Attach the support so that it sits firmly around the steering wheel.  
The cover of the battery compartment must lie on the inner side of the steering wheel here.  
The locking pins of the cover of the battery compartment must be pointing in the direction of the dashboard.

**Note**

Select a position on the steering wheel at which the remote will not disturb your normal holding behaviour at the steering wheel.

5. Turn the support so that the remote is lying well in the inside of the steering wheel later.



6. Then, place the remote on the cover of the battery compartment so that it engages audibly.

**Note**

Do not apply any force, in order to avoid damage to the support and/or the remote.





# Working with Memory Cards

Your navigation system supports SD memory cards.

## Inserting Memory Cards

1. Carefully take the **optional** memory card out of its packing (if included). Take care not to touch or dirty the contacts.
2. Insert the memory card carefully into the card bay with contacts pointing forward. The card must lock easily.

## Removing Memory Cards

### Note

Only remove the memory card if the navigation software has been closed and the device has been switched off by means of the On/Off button beforehand. Otherwise you will risk a loss of data.

1. To remove the card press lightly onto the upper edge until it ejects.
2. Pull the card out without touching the contacts.
3. Store the memory card in the packing or in another safe location.

### Note

Memory cards are very fragile. Take care not to dirty the contacts and not to force the card.

## Accessing Memory Cards

- The appliance only supports memory cards in the FAT16/32 file format. If you insert a card prepared with a different format (e.g. in cameras, MP3 players), your navigation system may not recognize it and will ask you to format it again.

### Attention!

Formatting the memory card irretrievably wipes out all data.



## Data Exchange via Card Reader

If you wish to copy large quantities of data (MP3 files, navigation maps) to the memory card, these can also be stored directly to the memory card.

Many computers already have memory card devices. Insert the card into your computer and copy the data directly to the card.

Because of the direct access you can achieve a much higher transfer rate compared to using ActiveSync®.

## Additional Card Material

Your navigation system is already equipped with digitalized map material in the internal memory and/or memory card at the factory. Depending on the configuration, additional maps may be included on your navigation CD/DVD. You will be able to transfer these cards to a memory card immediately. It is recommended that you use an external card reader (see also page 91). The GoPal Assistant supplied with the device enables a simple and individual compilation of the map material to be transferred.

Depending on the amount of map data on the navigation CD/DVD, memory cards with capacities of 256 MB, 512 MB, 1.024 MB or more may be required.

You can obtain additional memory cards (SD cards) in specialist stores.

## Transfer of card material to a memory card

The transfer of additional card material to a memory card can take place through Explorer on your PC via the following steps:

1. Insert the CD/DVD with the card material required.
2. Start your workstation and select your CD/DVD Drive.
3. Copy the file with the **.psf** ending out of the Directory of the region that you require to the **MapRegions** Directory on your memory card, from the CD/DVD.

You can transfer several files with map material to your memory card, depending on the capacity of the memory card.

If you have copied digitized maps of several countries or country groups onto your memory card, you will be required to select the desired map in the navigation application of your device.



## Alternate method of installing Navigation Software (using a Memory Card)

The software for your navigation system can be installed directly from a memory card.

The pre-installed software may have to be uninstalled beforehand (see special Clean Up function, Page 77).

You will be requested to install the navigation software during the initial adjustment.

Please proceed as follows:

1. Remove the memory card from the packaging carefully. Ensure the contacts are not touched or soiled.
2. Push the memory card into the SD slot until it engages.
3. Click on **OK**, in order to install the application.

The main screen, through which you will now be able to carry out the navigation settings, will appear after all data has been copied to your navigation system.

## Transferring Installation Files and Map Material to the Internal Memory

### Note

The navigation system must be connected to a computer by means of ActiveSync® for the transfer of the data.

Your device has an internal, permanent memory, which is located in the **\My Flash Disk** directory.

You will be able to make this directory, and others, visible with ActiveSync®, by means of the **Search** option. Directories and files can be manipulated as in Windows Explorer.

 


The required directory must have been stored, in order to make the installation files and the map material for the device available.

Deposit the **INSTALL** directory for the installation files at (\My Flash Disk\INSTALL). Deposit the map material in the **MapRegions** directory (\My Flash Disk\MapRegions). Please pay attention to the modes of lettering given above when naming the directories.

Pay attention to the fact that sufficient drive capacity must be available, if you have stored additional data on your navigation device. Remove files not needed if sufficient drive capacity is not available.



# Specifications

Parameter	Information	
<b>Power supply</b> Power supply cable for a cigarette lighter	<b>Phihong CLM10D-050</b>	
	<b>Input</b>	12-24V  / 1400 mA (max.)
	<b>Output</b>	+5V  / 2A (max.)
<b>Power supply</b> Mains adapter (optional)	<b>Phihong PSAA10R-050</b>	
	<b>Input</b>	100-240V ~0.4A (max.)
	<b>Output</b>	+5V  / 2A (max.)
Battery	Li-Ion, 3.7 V	
Earphone connection	For stereo earphones (3.5 mm)	
Memory card type	SD	
Bluetooth (optional)	Class 2	
FM-Transmitter (optional)	87.5 – 108 MHz	
USB interface	USB 1.1	
Dimensions	approx. 141 mm x 94 mm x 19 mm	
Weight incl. battery	approx. 260 g (without packaging)	
Temperatures	Operating	+32°F - +95°F (+0° C - +35° C)
	Storage	-4°F - +140°F (-20°C - +60°C)
Humidity (without condensation)	10 – 90 %	



# Model Overview

Model	Bluetooth / Microphone	FM-Transmitter	TMC via external TMC receiver	Dead Reckoning
P5235	○	●	●	○
P5435	●	●	●	○
X5535	●	●	●	●

● = Equipment available

○ = Equipment not available



# Conditions of Warranty for the United Kingdom

## Restricted Warranty

### I. General Conditions of Warranty

#### 1. General

This warranty covers defects relating to workmanship and manufacture in MEDION products. The period during which this warranty is valid and during which claims against the warranty can be made to MEDION must be in accordance with the following terms in order to be considered eligible:

- Is effective from the date of purchase or receipt of the MEDION product from an authorised seller of MEDION products; and
- expires at the end of the warranty period specified on the warranty card provided with the product.

For the warranty to be valid, you must:

- provide suitable evidence of purchase, a copy of the original purchase receipt from an authorised seller of MEDION products is preferred; or
- register your product within 28 days of purchase either online at [www.MEDION.co.uk](http://www.MEDION.co.uk) or by completing and returning the pre-paid registration card included with the product.

Please keep the original purchase receipt and the warranty card in a safe place. MEDION and its authorised sellers reserve the right to refuse a repair under warranty or a warranty confirmation if a proof of purchase [or registration of purchase] cannot be established, or has not been, submitted.

When it is necessary to return your product for repair please ensure that your product is suitably packed for transportation.

Provided that your product is still within warranty (please check the duration of the warranty period as described above) and is eligible for repair or replacement under the terms of the warranty, to return your product, please telephone MEDION on the service hotline number. You will be sent a pre-paid transportation box suitable for returning your product to MEDION. PLEASE MAKE SURE THAT YOU HAVE A BACKUP COPY OF ALL DATA ON THE PRODUCT BEFORE RETURNING THE PRODUCT TO MEDION. MEDION shall bear the costs of postage and packaging for returning the product and the transportation risk. However, if following examination of the defective product in question, MEDION, in its reasonable opinion, considers that the defect has been caused by:



- your operating and/or using the product other than as instructed in the accompanying documentation;
- damage caused in transit as a result of your negligence in packaging of the product; and/or
- otherwise than in accordance with the terms of this warranty;

This warranty shall be void and you may be required by MEDION to reimburse MEDION for the reasonable costs of postage and packaging before MEDION will return the product to you. If so and you would still like MEDION to repair or replace the product, MEDION may do so but you will be charged MEDION's standard rates for repair and replacement for this service.

Before returning the product, please contact MEDION via the service hotline or via the internet ([www.MEDION.co.uk](http://www.MEDION.co.uk)). You will receive a reference number (RMA No.) on the warranty card. Please mark the outside of your package to ensure that this reference number is clearly visible. Please submit a letter containing as much detailed information as possible and, a full description of the defect or fault.

This should include:

- a description of the fault;
- when it occurred, how long it has been evident and how frequently it occurs;
- any error message(s) displayed when using the product;
- a description of the circumstance(s) and conditions in which the fault occurs; and
- whether it is an intermittent or persistent fault;

This will greatly assist MEDION in identifying the defect, when submitted together with the defective product.

Unless otherwise instructed by a MEDION representative in all cases, the product must be returned complete with all parts which were included with the original product. Incomplete contents of the returned package may lead to a delay in the repair or replacement. MEDION does not accept any liability for any additionally submitted material(s) which were not supplied with the original MEDION product.

This warranty does not affect your statutory rights in any way and is subject to the applicable legal statutes of the country where the product was sold to you by an authorised MEDION seller.



## 2. Scope

Subject to any exclusions set out within this warranty, where there is a defect in your MEDION product covered by this warranty, MEDION will repair or replace the MEDION product. The decision whether to repair or replace the product will be made solely at the discretion of MEDION. MEDION may, in its own discretion, replace the product returned for repair under warranty with a replacement product that is either identical or, in the event that such product(s) are no longer available, a product of equal or superior specification and quality.

No warranty is given for batteries or rechargeable batteries or for consumable materials subject to wear and tear, i.e. for parts which have to be replaced periodically during the normal use of the product, such as video-projector lamp.

Non critical failures that fall within industry specified tolerances e.g. noise, LCD pixels are not covered by this warranty. Please consult the appropriate section in your user or instruction manual for this product for exact specifications and tolerances.

To the extent which is permitted under law, MEDION will accept no liability for burnt-in images on plasma or LCD products as a result of normal wear and tear during the operation of the product. Please refer to your user or instruction manual for this product for detailed operating instructions for your plasma or LCD product.

The warranty does not cover errors relating to the playback of data media in an incompatible format or created with unsuitable software.

If it is found during repair or assessment that the defect concerned is not covered under warranty, MEDION reserves the right to invoice you for all reasonable costs incurred by MEDION. These costs will be in relation to the return of the product, including reasonable administration costs, plus reasonable costs for materials used and labour provided when repairing or replacing the product. This is subject to MEDION providing you with an estimate for carrying out such work prior to costs being incurred and that you have accepted the estimate.

You are entitled to seek independent advice or consultation relating to your product or any of MEDION's findings. MEDION will not be liable for any costs incurred to you when doing so.



### 3. Exclusion from warranty

To the extent permitted by law, this warranty shall be void in the event that defects or loss caused by:

- a. failure and damage resulting from the operation of the product in an environment other than that recommended in the accompanying user or instruction manual (e.g. in direct sunlight or in a damp room);
- b. accidental damage;
- c. use other than in accordance with the accompanying user or instruction manual;
- d. modifications, conversions, expansions, maintenance and/or repairs made to the MEDION product by unauthorised repairers or use of unauthorised third party parts;
- e. negligence;
- f. virus attack or software errors; or
- g. improper transportation or packaging during return of the product.

This warranty will also be considered void if labels or serial numbers of the product or of a component of the product are modified or made illegible.

To the extent permitted by law, MEDION shall; only be responsible for losses which are a reasonably foreseeable consequence of the relevant defect in the product; MEDION will not be responsible for any costs incurred in relation to software configuration; economic loss; loss of opportunity; loss of income; or loss of data or software arising out of its repair or replacement of a MEDION product under this warranty.

### 4. Service Hotline

Before returning the product to MEDION you must contact us using the service hotline or via the internet ([www.MEDION.co.uk](http://www.MEDION.co.uk)). You will receive further instructions for making your claim under warranty when you call.

The service hotline is available on 362 days in the year, including Sundays and bank holidays but excluding Christmas day, New Years Day and Easter day. The service hotline is subject to [national rate] telephone call charges. These charges are subject to change. The price of your call will be stated at the beginning of the call.



## **II. Special warranty conditions for MEDION PC, notebook, pocket PC (PDA) and navigation devices (PNA)**

The following terms apply to MEDION PC, notebook, desktop, pocket PC and laptop products and optional items included with such products. If one of these items has a fault, you also have a warranty claim for its repair or replacement, from MEDION. The warranty covers the costs of materials and labour for repairing or replacing the defective MEDION product or the optional item in question.

Hardware connected to your product that was not produced or marketed by MEDION can invalidate the warranty if MEDION can reasonably demonstrate that damage to the MEDION product or of the optional item included with the delivery was caused by such hardware. You are entitled to seek independent advice or consultation relating to your product or any of MEDION's findings. MEDION will not be liable for any costs incurred to you when doing so.

This warranty is restricted in relation to any pre-installed operating system as well as to application programme software that is included with the MEDION product in question. This warranty is restricted as follows:

For pre-installed operating system as well as to application programme software included in the MEDION product, MEDION only guarantees the data media (e.g. the diskettes and CD-ROMs) upon which this software is delivered and warrants that such data media shall be free from material and processing defects for a period of 90 days from the date of purchase of the MEDION product from an authorised seller of MEDION. MEDION will replace defective data media free of charge.

Any claims in respect of defective pre-installed operating system as well as to application programme software are hereby expressly excluded and you should contact the relevant licensor or copyright owner of the defective software in question. MEDION does not guarantee that any software supplied with MEDION products will function without interruption, will be free from errors or that it will fulfil your requirements. MEDION does not guarantee the 100% accuracy of the maps provided with the Navigation device.

It may be necessary to delete all data in the product in order to repair the MEDION product. **PLEASE MAKE SURE THAT YOU HAVE A BACKUP COPY OF ALL DATA ON THE PRODUCT BEFORE RETURNING THE PRODUCT TO MEDION.** To the extent permitted by law, MEDION excludes all liability for loss of data and MEDION recommends in all cases that you back up all data on your MEDION product before returning the product to MEDION.



### **III. Special warranty conditions for repair on site or re-placement on site**

If a claim for repair or replacement on site is included within the terms of the warranty card provided with the product, the special warranty conditions for repair or replacement of your MEDION product on site apply.

The following provisions must be made by you for carrying out repairs or replacements on site:

- MEDION or its authorised personnel must have unrestricted, safe and immediate access to the products.
- Telecommunication facilities required by MEDION or its authorised personnel for proper execution of your order, for testing and diagnostic purposes and for remedying faults are provided by you at your own expense.
- You are responsible yourself for restoring the application software after the repair services have been carried out by MEDION or its authorised personnel.
- You must take all other necessary steps to enable MEDION or its authorised personnel to carry out your order properly.
- You are responsible yourself for connecting and configuring any existing external peripheral products after MEDION or its authorised personnel have carried out their repairs.
- The free cancellation period for repairs or replacements on site is 24 hours, thereafter our reasonable costs resulting from late or missing cancellation shall be invoiced at your expense.

### **Liability limitations**

The contents of this manual are subject to unannounced changes caused by technical progress. Manufacturer and sales shall not be responsible for any damages which have been caused as a result of omissions or errors in the information provided in this manual.

Under no circumstances shall we be liable for any of the following:

1. Claims made against you by third parties based on loss or damage.
2. Loss or damage to your blanks, recordings or data.
3. Economic follow-on damage (including lost profit or savings) or associated damage even in the case that we have been informed of the possibilities of this type of damage.

In some countries the exclusion or limitation of accompanying or follow-on damage is not legally accepted so that the above limitations do not come into force.



# Index

## A

AC Adapter .....	18
Accessing Memory cards .....	90
Additional card material.....	91
Aerial orientation .....	33
Alarm Clock (Wake up function)	
Ending the application.....	68
Interfaces .....	65
Main screen .....	64
Selecting an alarm signal .....	67
Setting the system time .....	66
Setting the volume .....	67
Snooze function.....	68
Alternative installation of the navigation software from a memory card .....	92
Ambient temperature .....	2
Auto run .....	80
Auto start.....	80

## B

Battery Operation .....	5
Bluetooth	
Accepting incoming calls .....	52
Main screen .....	50
Making calls.....	52
Pairing .....	51
Starting the application .....	49

## C

Cabling.....	4
Card reader.....	91
Care of the Display .....	6
Cleaning .....	5
CleanUp .....	22, 77
Components	
Bottom components.....	11
Top components .....	11
Contact Viewer	
Contact list .....	70
Create contacts database .....	69
Selection of addresses and phone numbers .....	72
Visiting card.....	71

Contents .....	iii
Copyright .....	ii
Customer service .....	76

## D

Data exchange .....	91
Data Security.....	1
DC AutoSuspend .....	78
Dead Reckoning (gyroscope) .....	83

## E

Earphone connector.....	11, 15
Electromagnetic Compatibility .....	3
EMC .....	3
Extension socket.....	14

## F

FAQ.....	75
Fingerprint sensor .....	11, 26
FM Transmitter	
Interfaces .....	42
Selecting the frequency.....	42
Starting the application.....	41
Main screen .....	41

## G

GPS .....	83
-----------	----

## H

Hard Reset.....	31
Holder with extension socket	
Back components.....	15
Front view .....	14
Holding clip .....	14
Hotline .....	76

## I

Initial set up	
Charging the battery.....	16
Installing the navigation software ..	20
Power supply .....	17
Switching on the device .....	19

## L

Liability limitations .....	100
-----------------------------	-----



Loudspeaker .....	10
-------------------	----

## **M**

Memory cards.....	90
Microsoft® ActiveSync® .....	80
Mini-USB-Connector.....	11, 15
Mounting the car holder.....	34
MP3 Player	
List of favourites.....	57
Select title.....	56
Bookmarks.....	57
Main screen .....	54

## **N**

Navigation	
Attaching the navigation system .....	35
Mounting the car holder .....	34
Safety instructions .....	32
Starting the navigation software .....	38
Netzadapter.....	18
Note .....	i

## **O**

On/Off switch.....	11
Operating	
Switching on/off the device .....	21
Operating Environment.....	2

## **P**

Password .....	i, 23
Pay TMC .....	84
Picture Viewer	
Main screen .....	58
Operation .....	58

## **Q**

Quality .....	ii
---------------	----

## **R**

R&TTE .....	5
Recycling and Disposal .....	6
Repair .....	2
Reset opening.....	13
Resetting the navigation system	
Hard Reset .....	30
Soft Reset.....	30

## **S**

Safety and Maintenance .....	1
------------------------------	---

## **Safety instructions**

Navigation .....	32
Connection .....	4
Ambient temperature.....	2
Data security .....	1
Operating environment .....	2
Repair.....	2
Power supply .....	4
Cabling .....	4
Battery operation .....	5
Maintenance .....	5
Care of the display .....	6
Transport .....	7
SD Slot.....	12
Security.....	23
Storing a fingerprint.....	26
Serial Number.....	i
Service .....	ii
Faults and possible causes.....	76
Hotline.....	76
Specifications .....	93
Speech commands.....	44
Standards	
R&TTE.....	5
Starting the navigation software .....	38
Stylus .....	10
Sudoku	
Description of the switch fields.....	73
Main screen .....	73
SuperPIN.....	i, 25, 28
Supplied Items.....	8
Synchronisation with the PC .....	80

## **T**

TMC.....	84
Touch Screen .....	9
Transfer of card material to a memory card.....	91
Transferring Installation Files and Map Material to the Internal Memory.....	92
Transport .....	7
Travel Guide .....	63

## **U**

UUID.....	i, 25, 28
-----------	-----------

## **V**

Video Player	
--------------	--



Main screen .....61

Views

Back components .....10

Front components .....9

Left components.....13

---

**W**

Warning function for traffic  
monitoring points ..... 39

Warranty ..... 95



